



## **Desk with Outlet and LED Light**

### **User Manual**

## INSTALLATION METHOD 1

**File Drawer on the left ( From P4 to P16)**







 

 

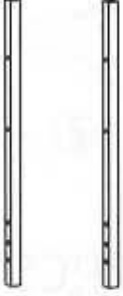 


 



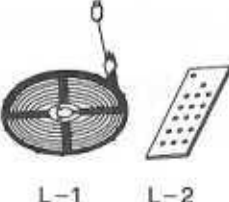 


---

## INSTALLATION METHOD 2

**File Drawer on the right ( From P17 to P29)**

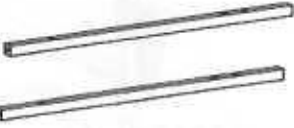

 
1 	2 	3 	4 
5 	6 	7 	8 
9 	10 	11 	12 
13 	14 	15 	16 
17 	18  L-1    L-2		

# Accessories

<p><b>A</b></p>  <p>M4*12MM 4PCS</p>	<p><b>B</b></p>  <p>M6*12MM 8PCS</p>	<p><b>C</b></p>  <p>M6*23MM 6PCS</p>	<p><b>D</b></p>  <p>M6*28MM 10PCS</p>
<p><b>E</b></p>  <p>M6*40MM 16PCS</p>	<p><b>F</b></p>  <p>5*48MM 8PCS</p>	<p><b>G</b></p>  <p>M6 4PCS</p>	<p><b>H</b></p>  <p>2PCS</p>
<p><b>I</b></p>  <p>8PCS</p>	<p><b>J</b></p>  <p>2PCS</p>	<p><b>K</b></p>  <p>M4 - M6 S3*2 S4 S4 1PC</p>	<p><b>L</b></p>  <p>1PC</p>
<p><b>M</b></p>  <p>1PC</p>	<p><b>N</b></p>  <p>1PC</p>	<p><b>O</b></p>  <p>M3*12MM 2PCS</p>	<p><b>P</b></p>  <p>M6*30MM 10PCS</p>

# Disassembly Diagram

## INSTALLATION METHOD 1

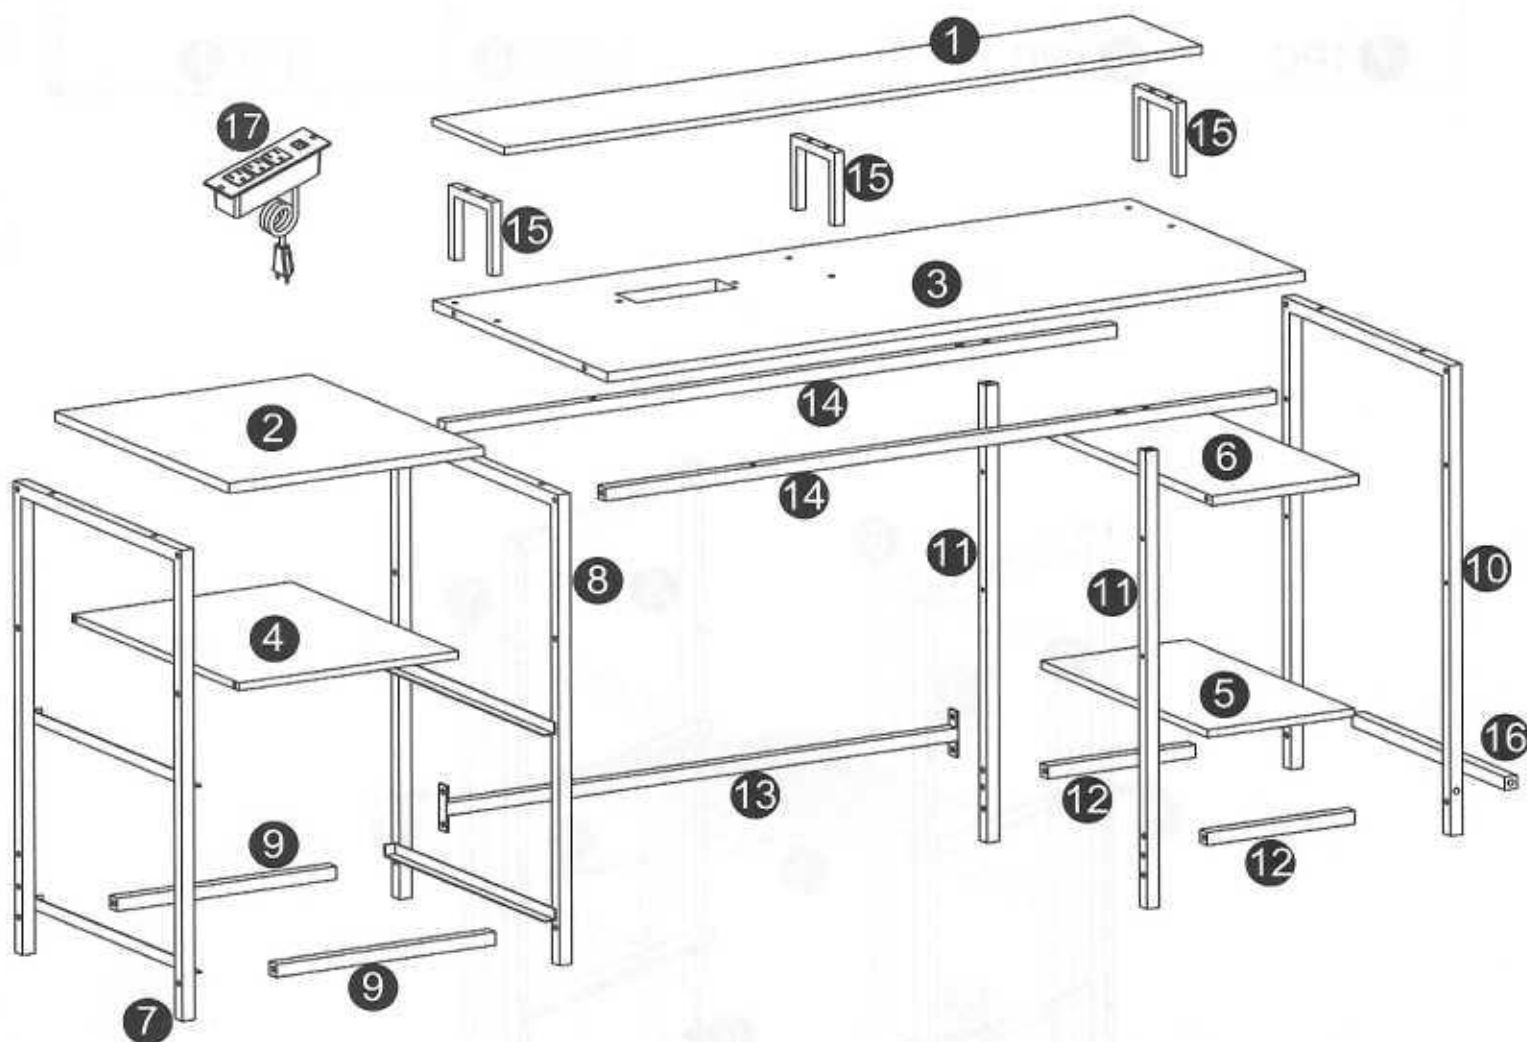


Before assembly, please read the USER MANUAL thoroughly for quick assembly, check accessories and confirm they are complete.

If you have any concerns or questions during assembly or about product itself, please feel free to contact us via Amazon Orders or Customer Support Email:





[Furologeeservice@sincerehl.com](mailto:Furologeeservice@sincerehl.com)


## Step1 Screw the adjustable feet of the file cabinet

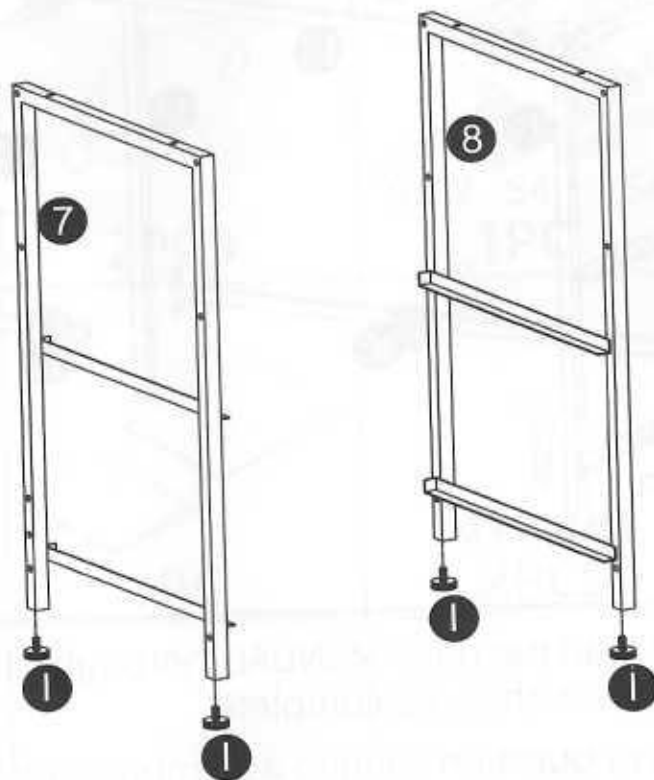 

## Step2 Assemble the the file cabinet

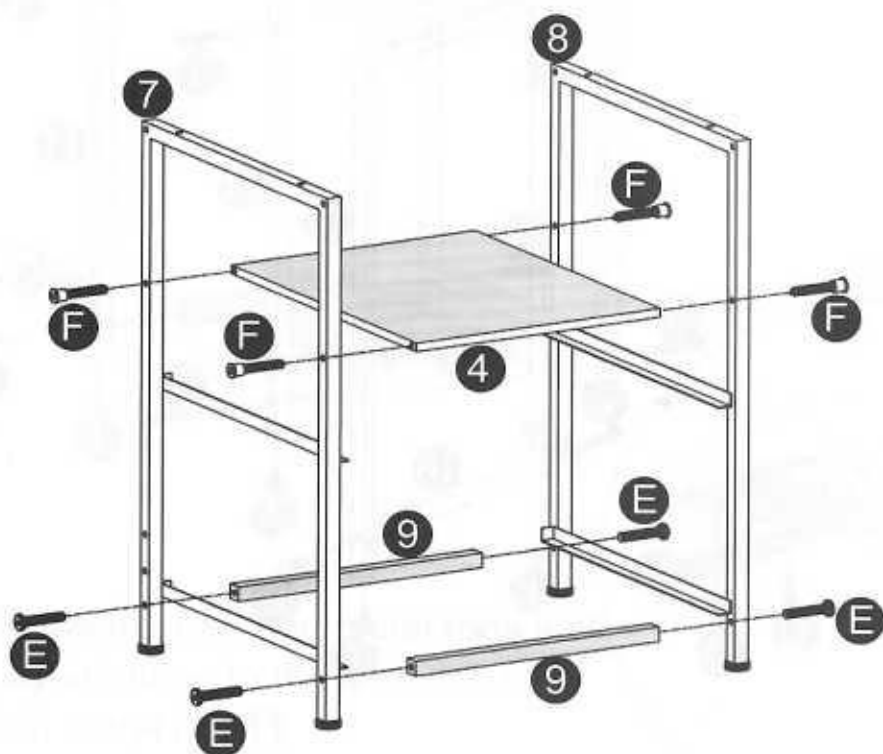 
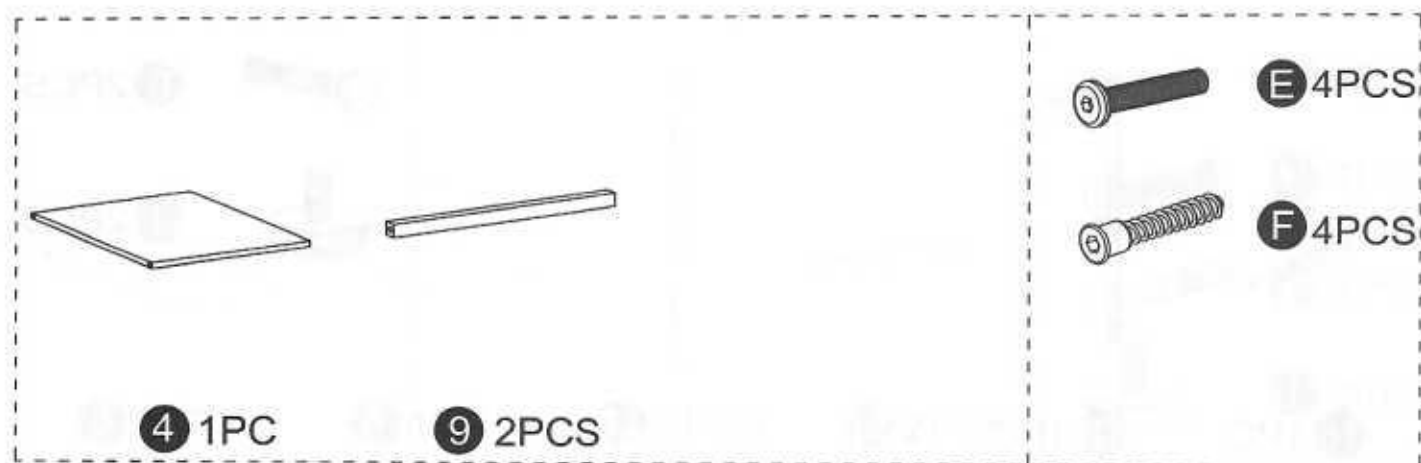 


### Step3 Assemble the frame of side shelf and screw the adjustable feet

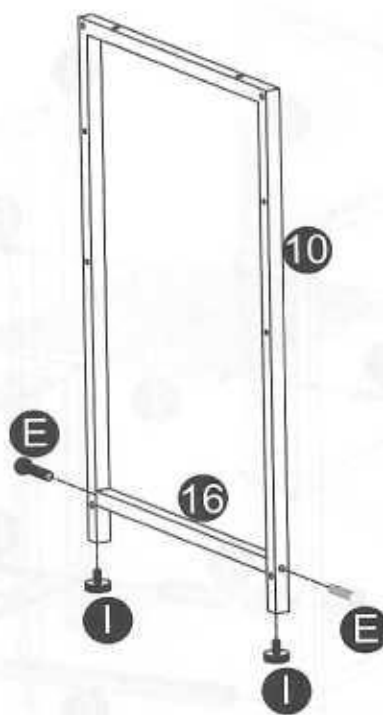 





## Step4 Assemble the side shelf

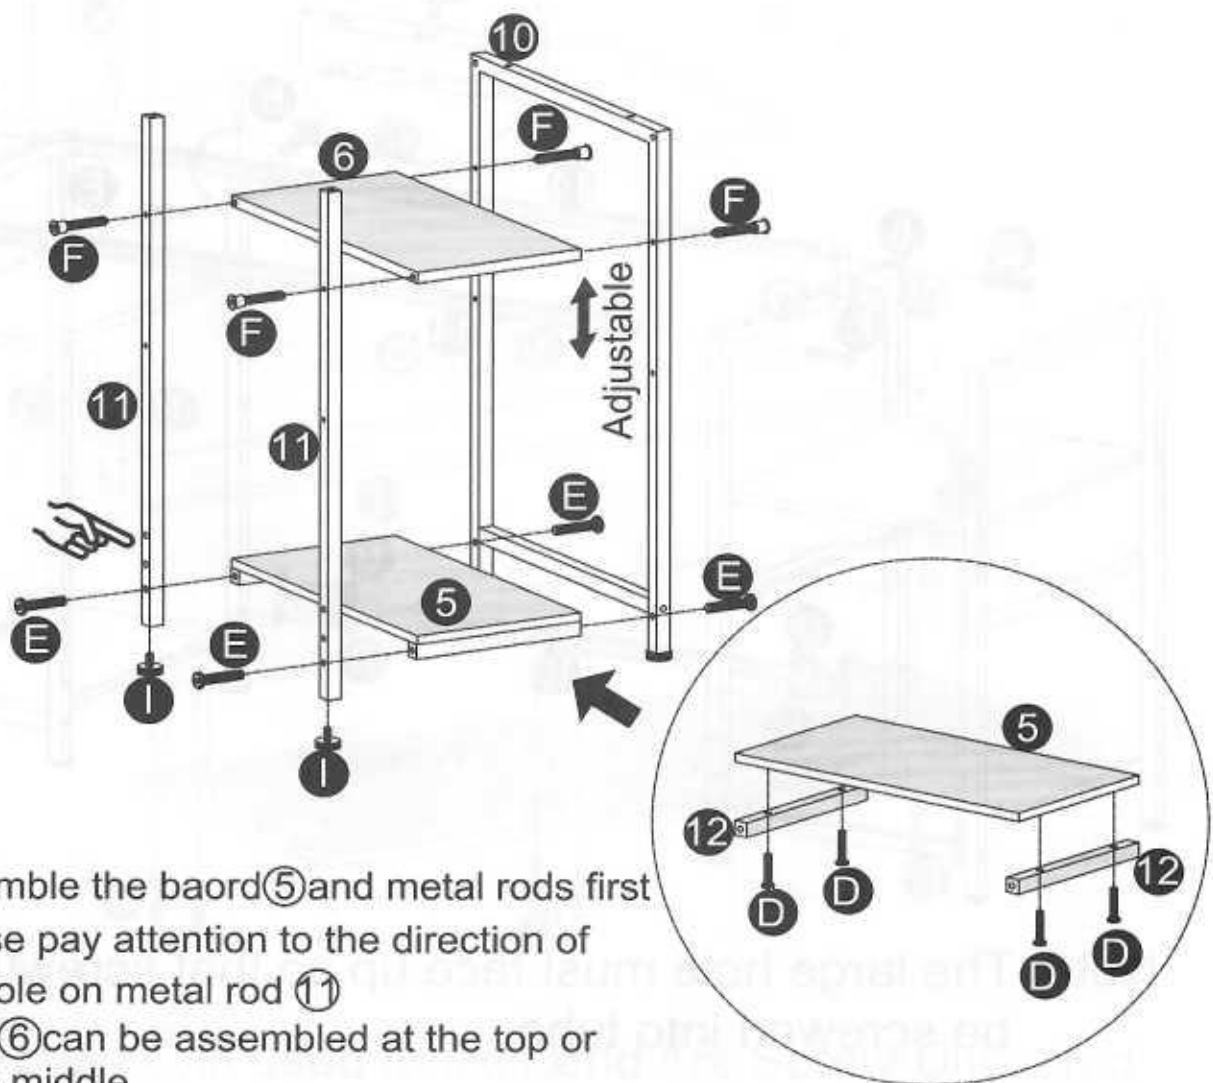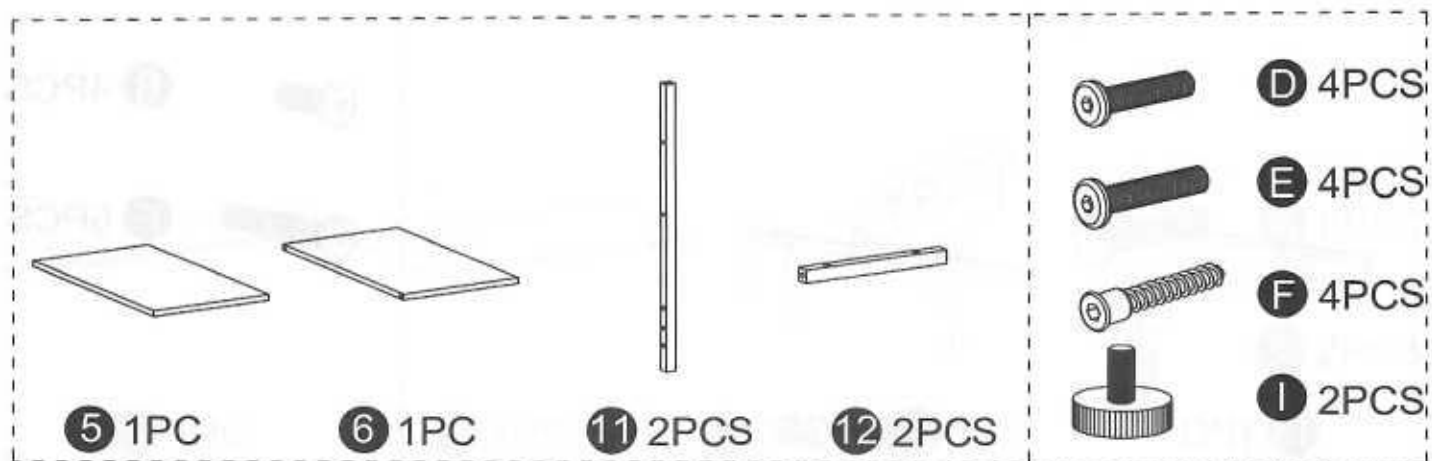  



Note: 1. Assemble the board ⑤ and metal rods first  
 2. Please pay attention to the direction of the hole on metal rod ⑪  
 3. Shelf ⑥ can be assembled at the top or in the middle

## Step5 Assemble metal tubes under the top board and the bottom tube

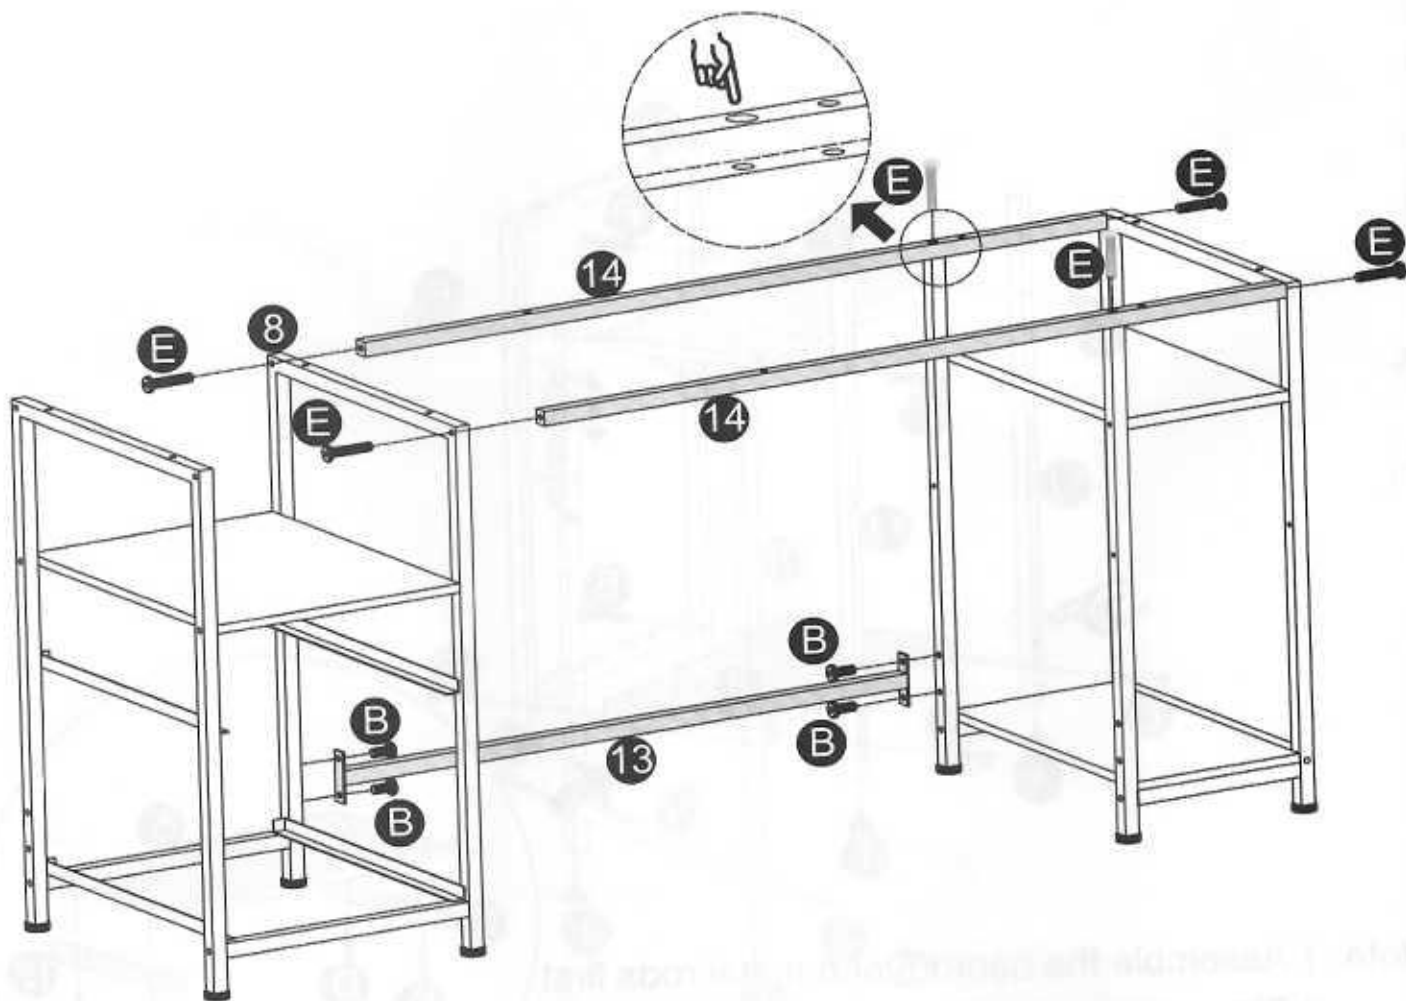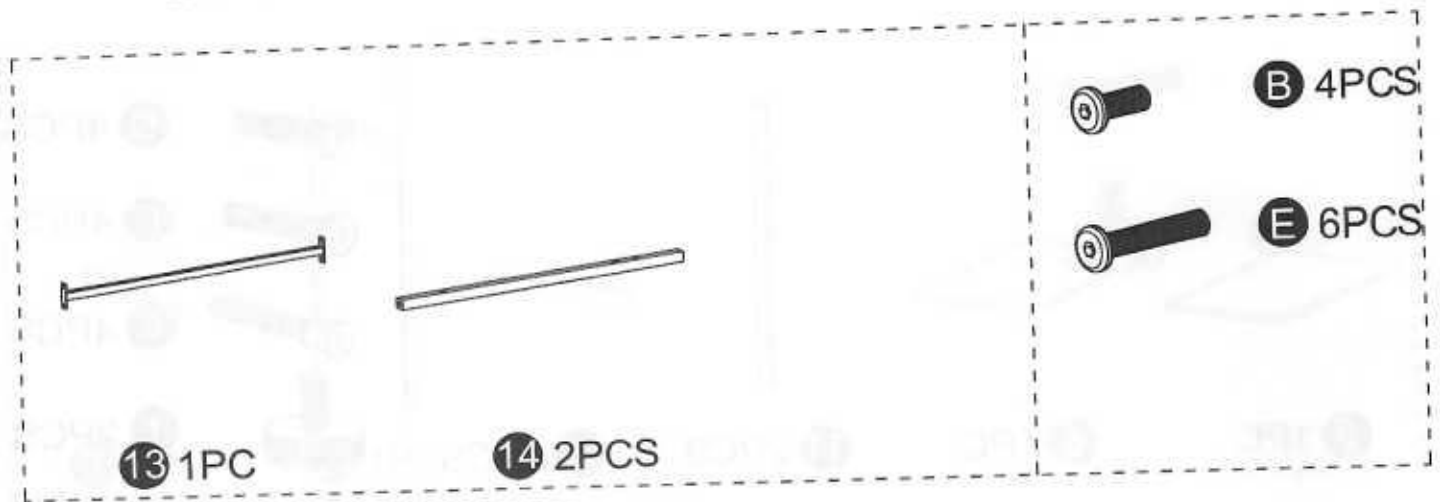  



Note: The large hole must face up so that screw ⑤ can be screwed into tube

## Step6 Assemble the monitor stand and outlet, then fix it to the top board

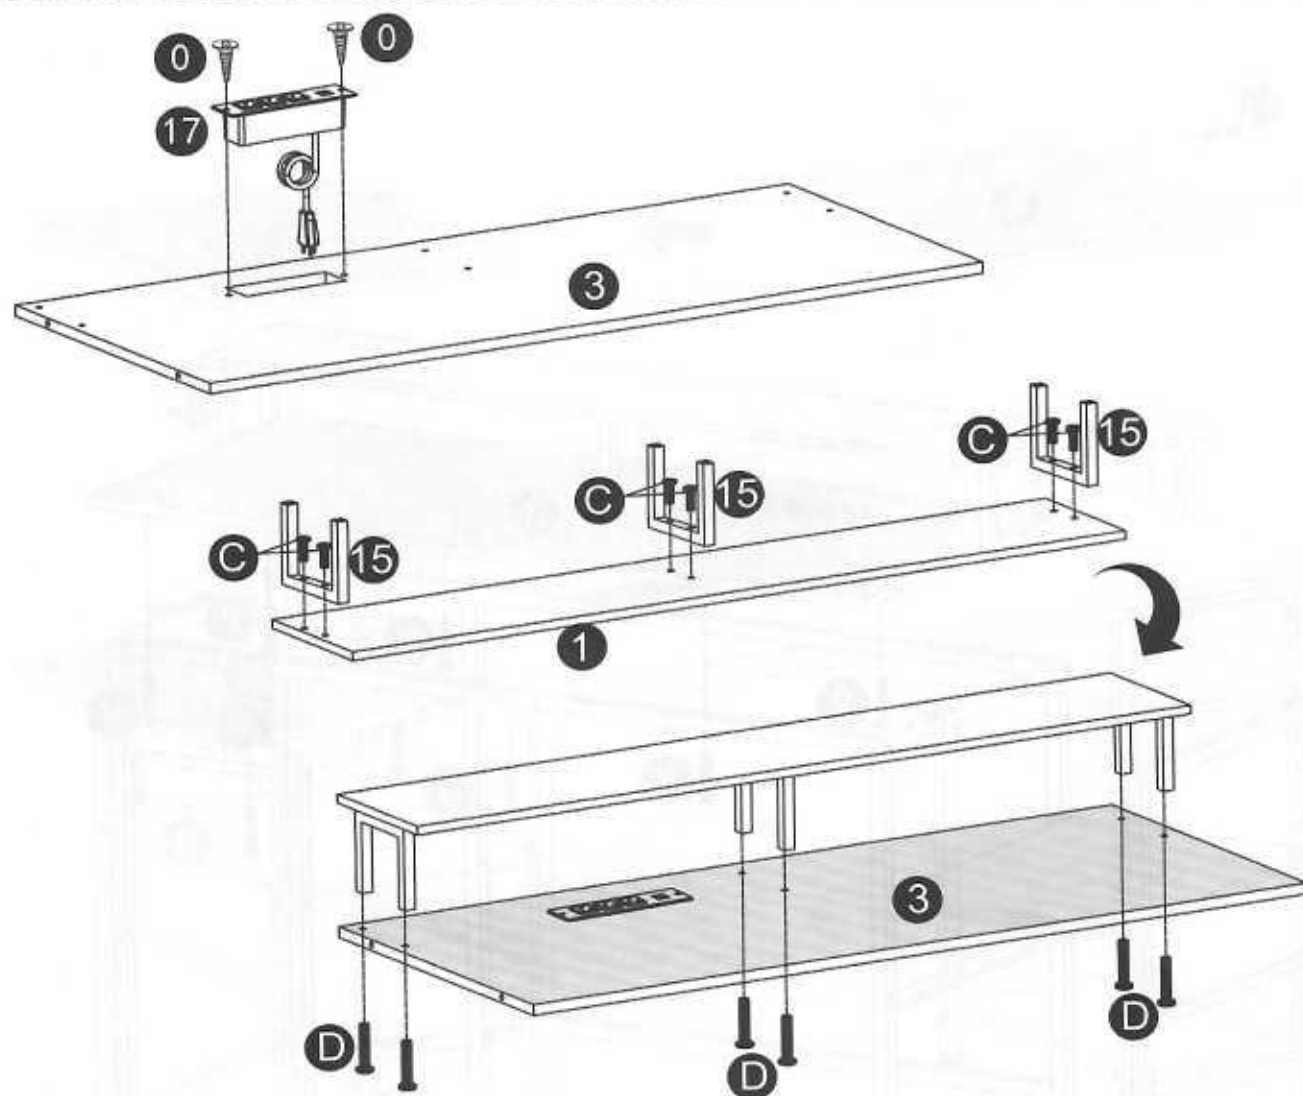 
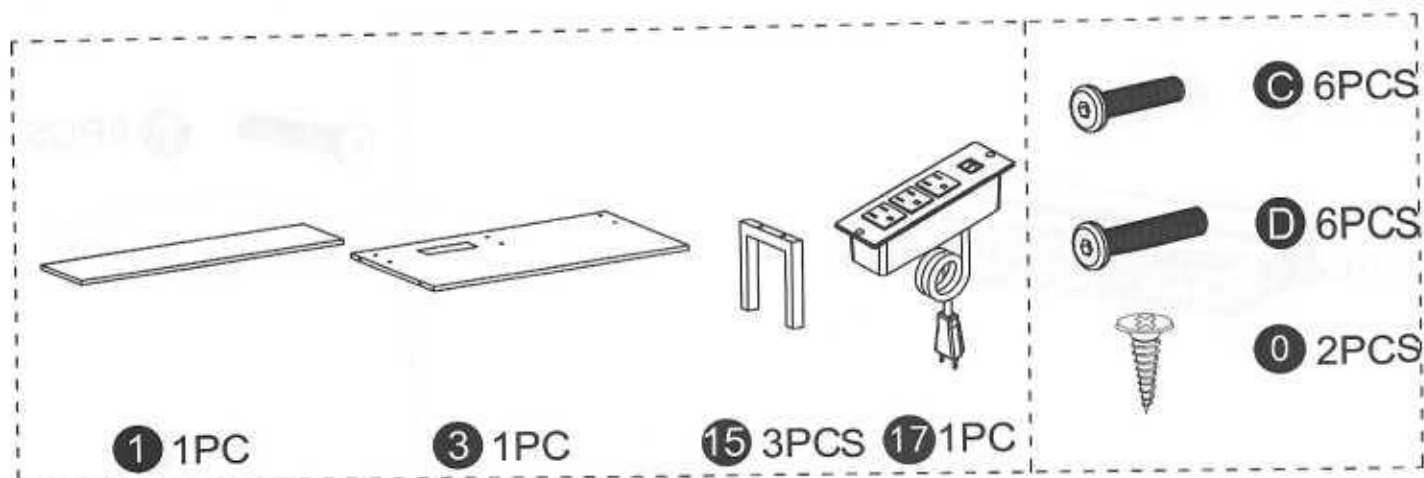 


Note: Screw C is used to fix 1 and 15; Screw D is used to fix 3 and 15


## Step7 Assemble the top board

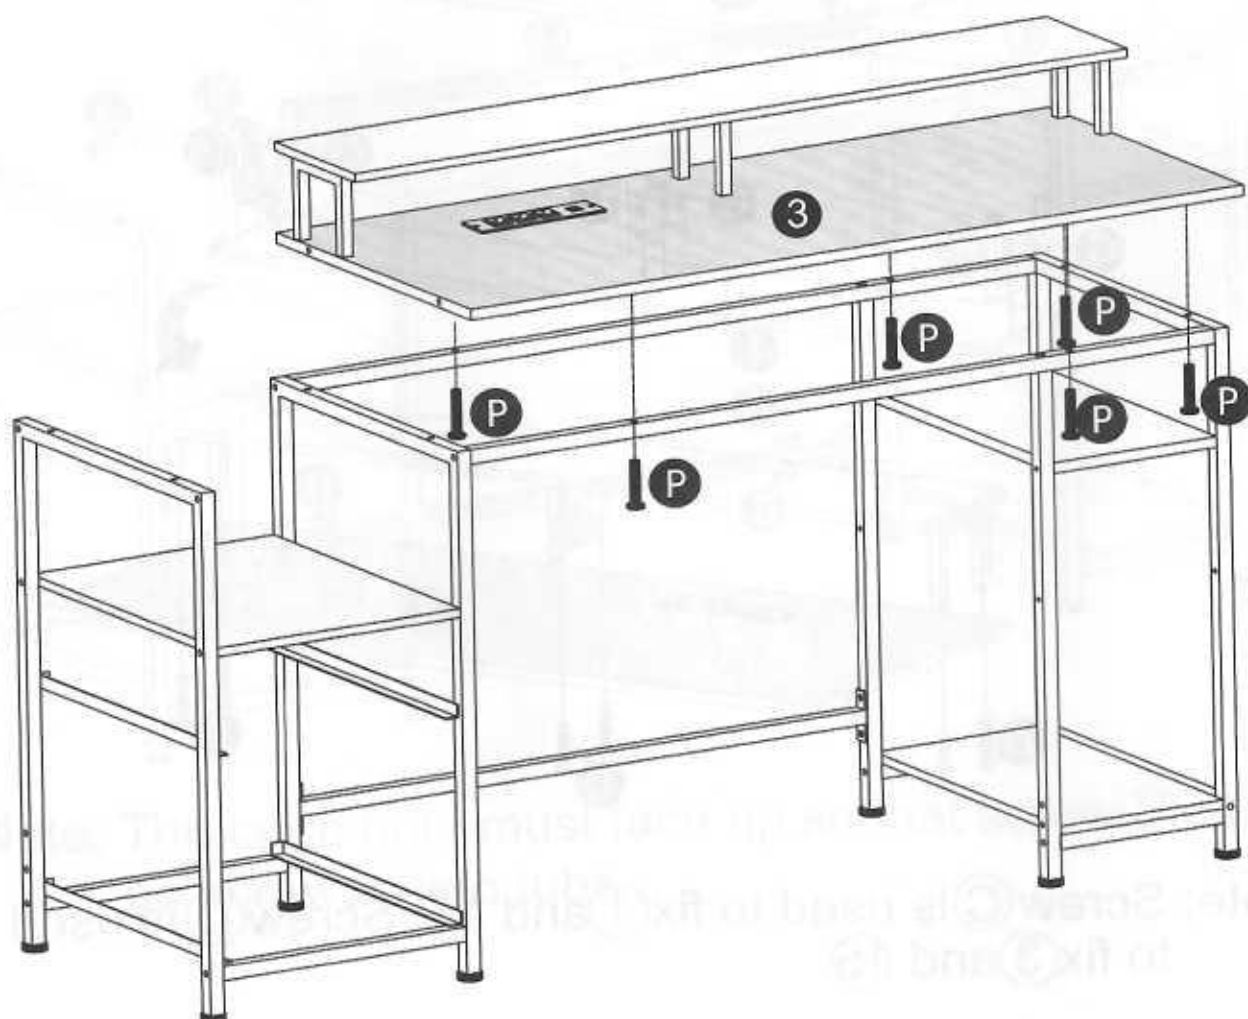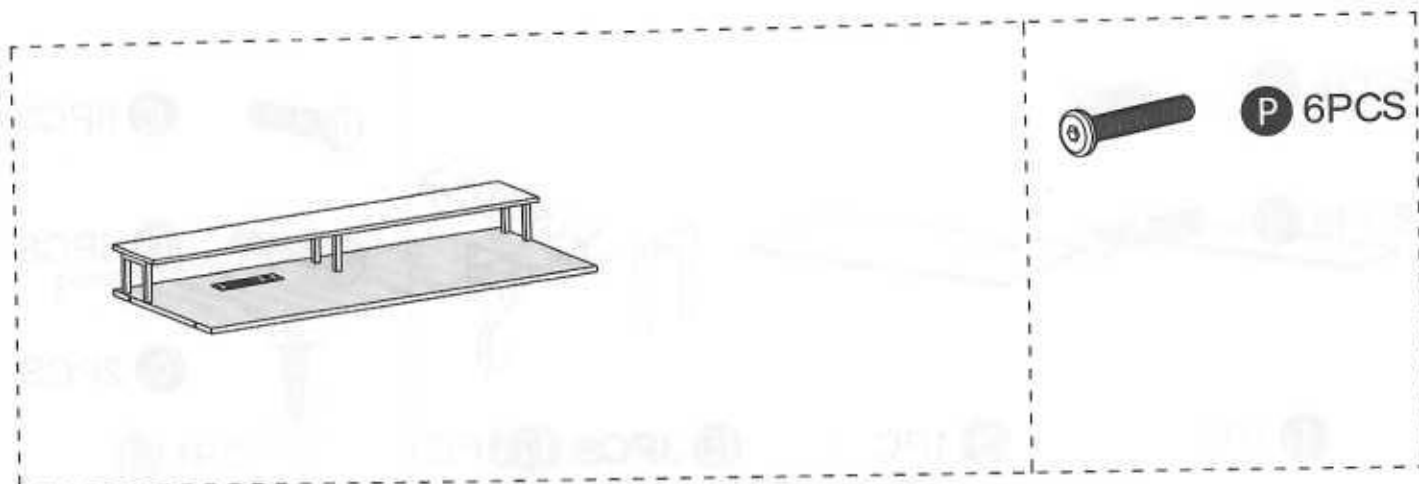  

## Step8 Snap into the wooden pin,then fix the small top board on the desk

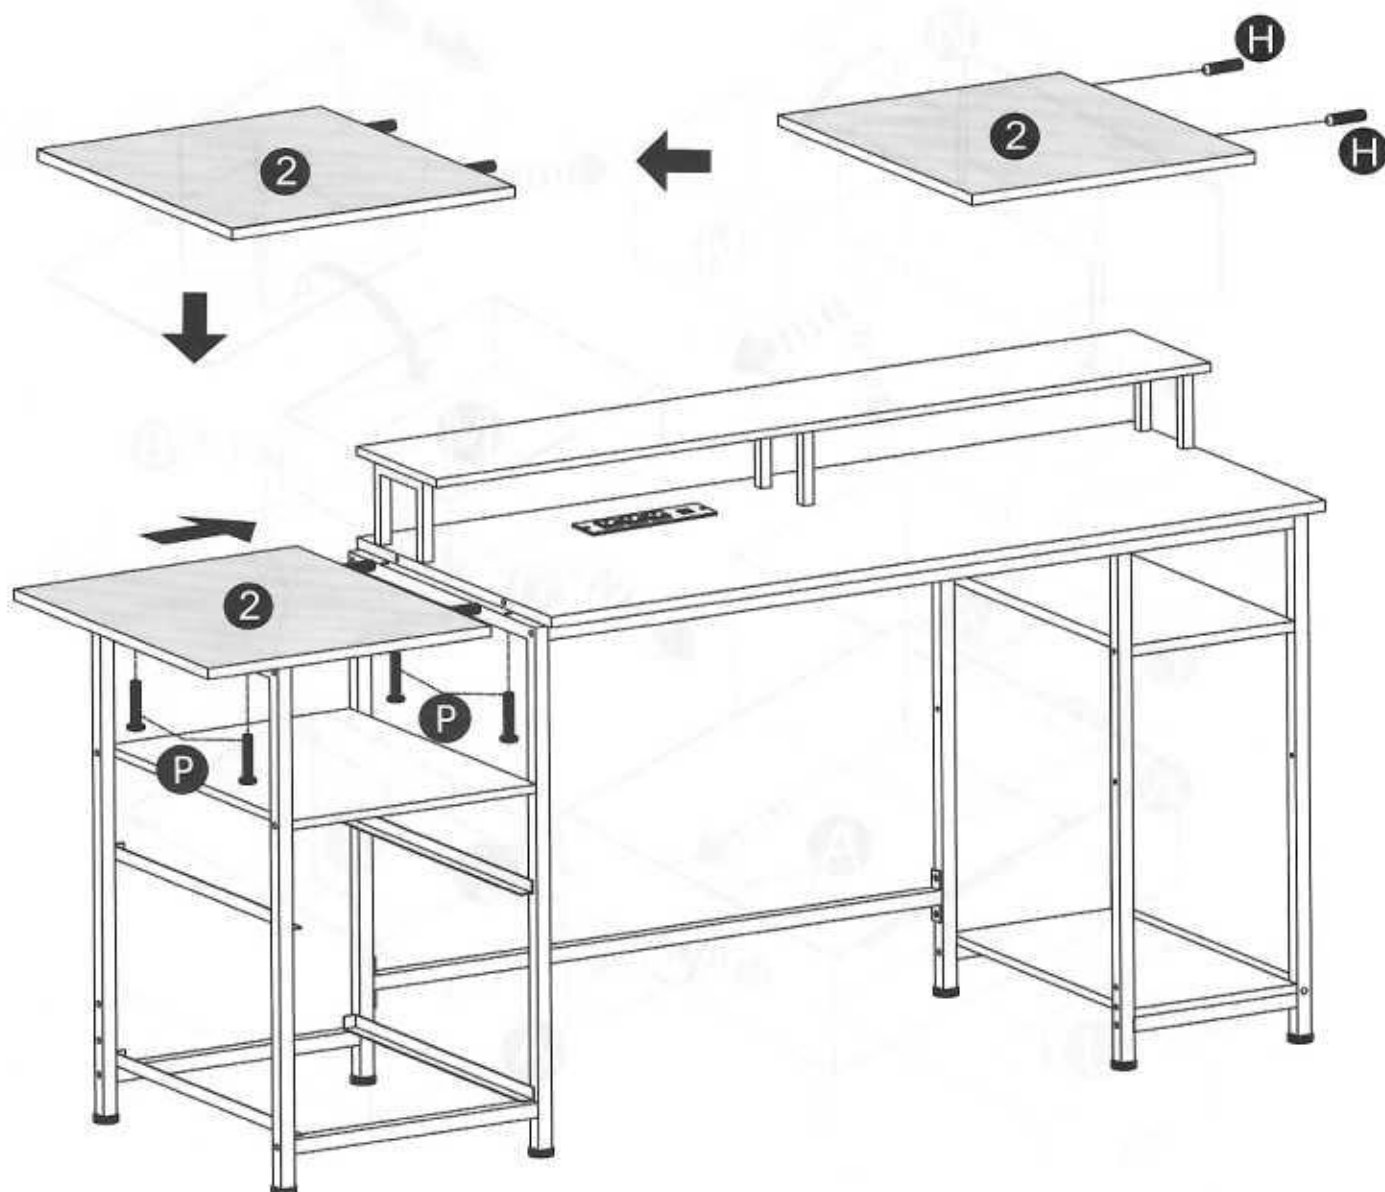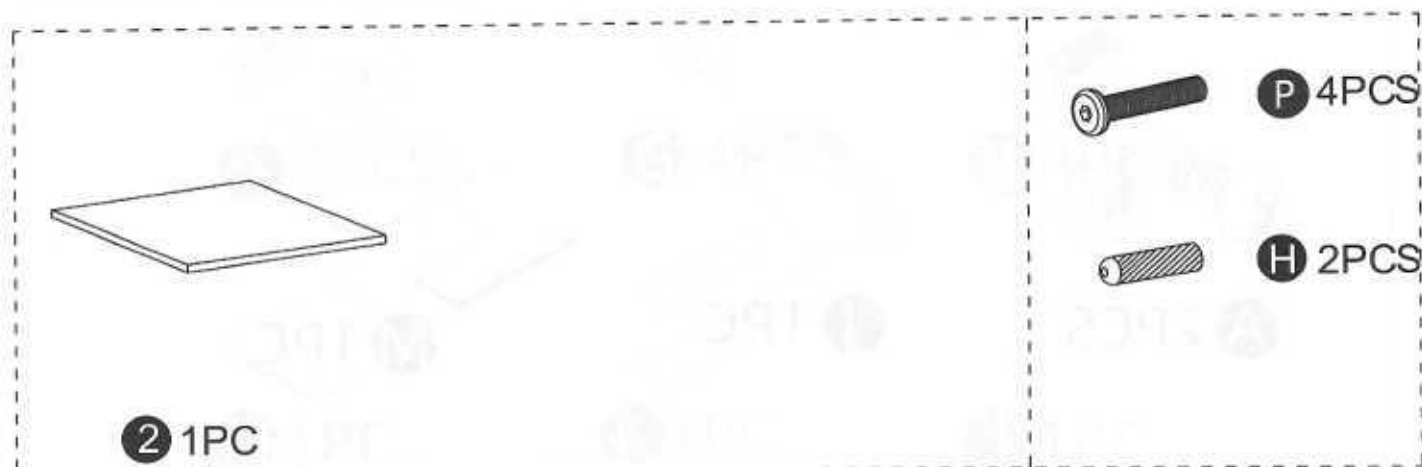  


## Step9 Assemble the drawer

 




**A** 2PCS



 
**J** 1PC

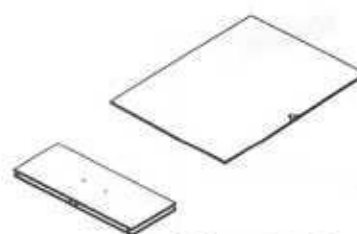

**M** 1PC

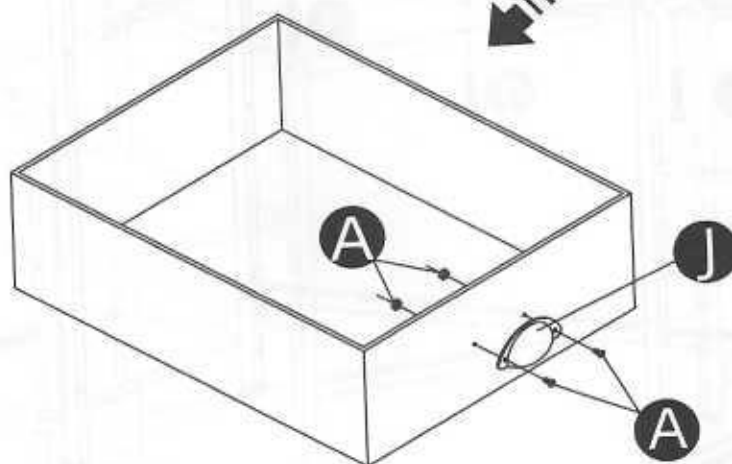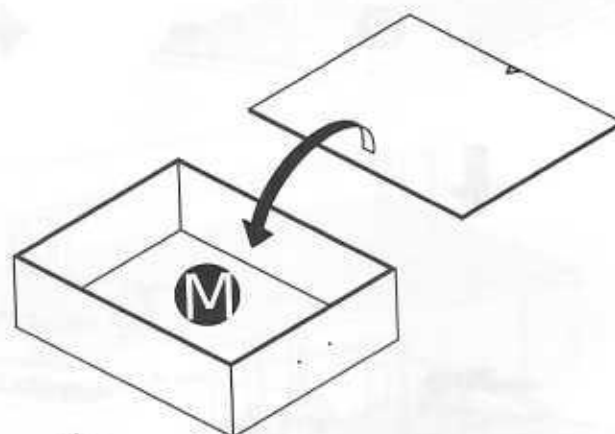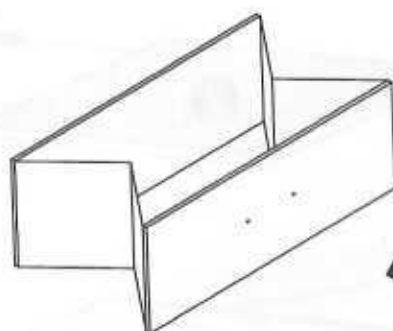   

## Step10 Assemble the file cabinet

 


**A** 2PCS



**G** 4PCS



 **B** 4PCS

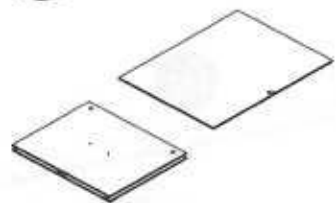


**N** 1PC



**L** 1PC



 **J** 1PC

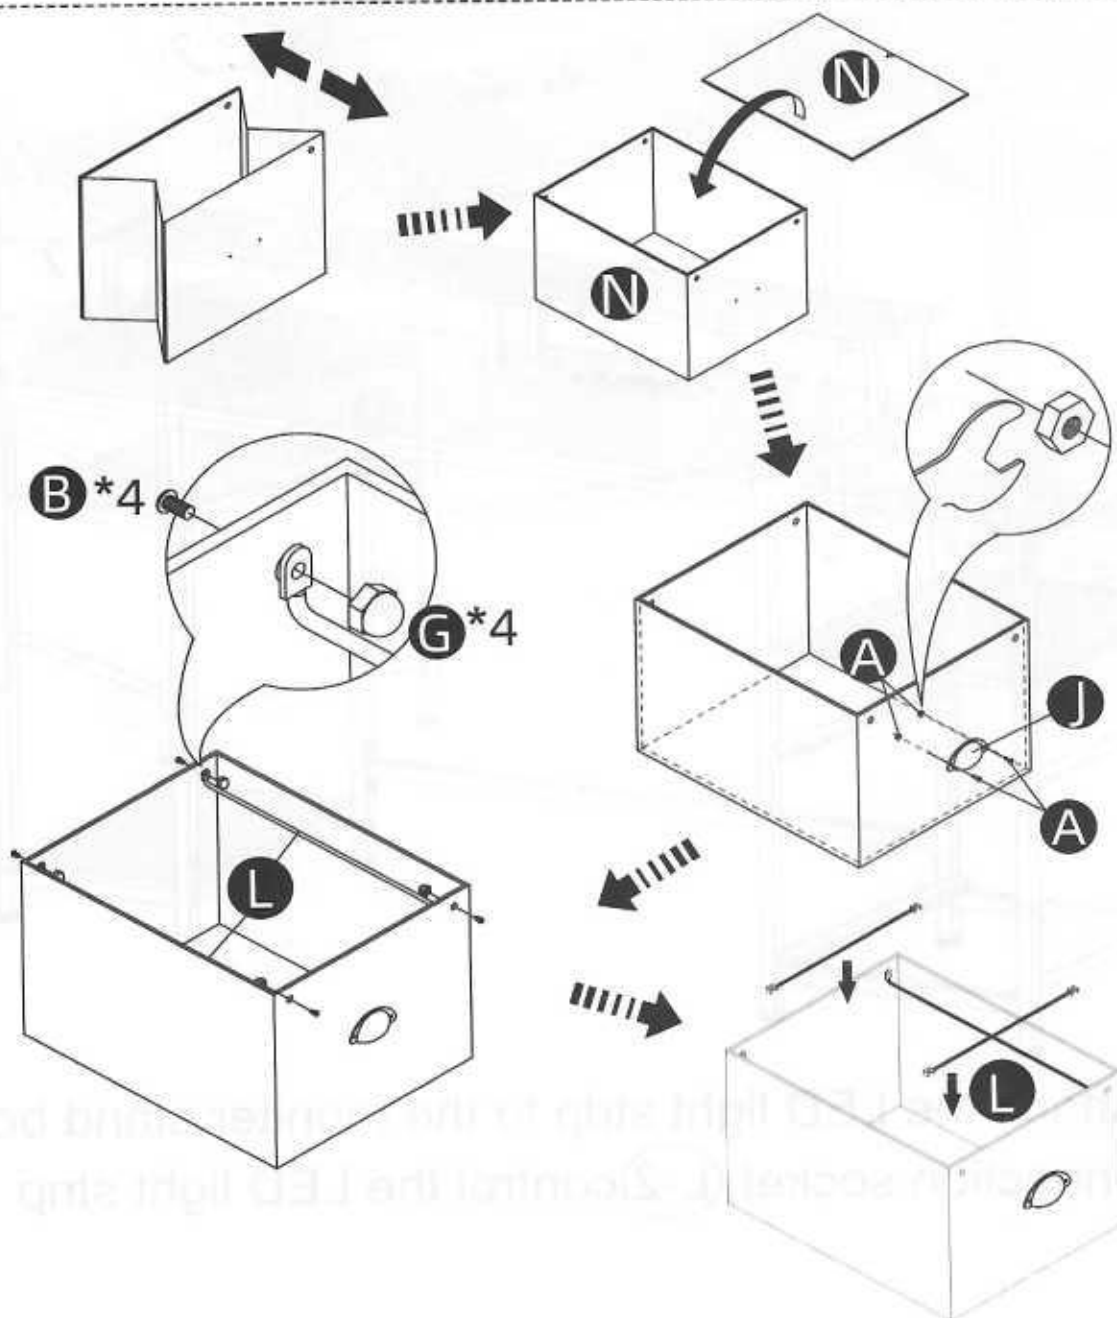


## Step11 Assemble the LED light strip



Note: Attach the LED light strip to the monitor stand board, then connection socket, (L-2) control the LED light strip



 
## Step12 Put in the drawer and the file cabinet

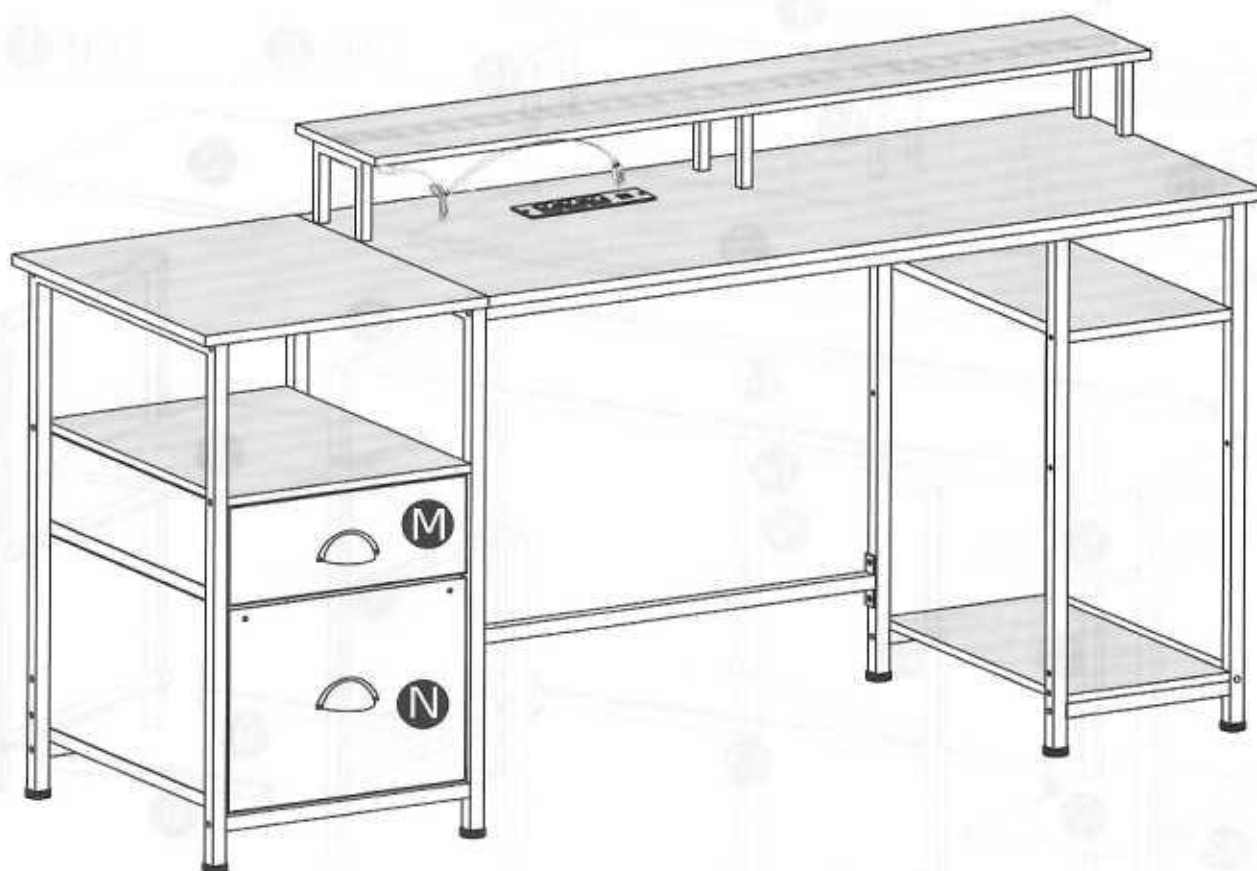

# Disassembly Diagram
 
## INSTALLATION METHOD 2

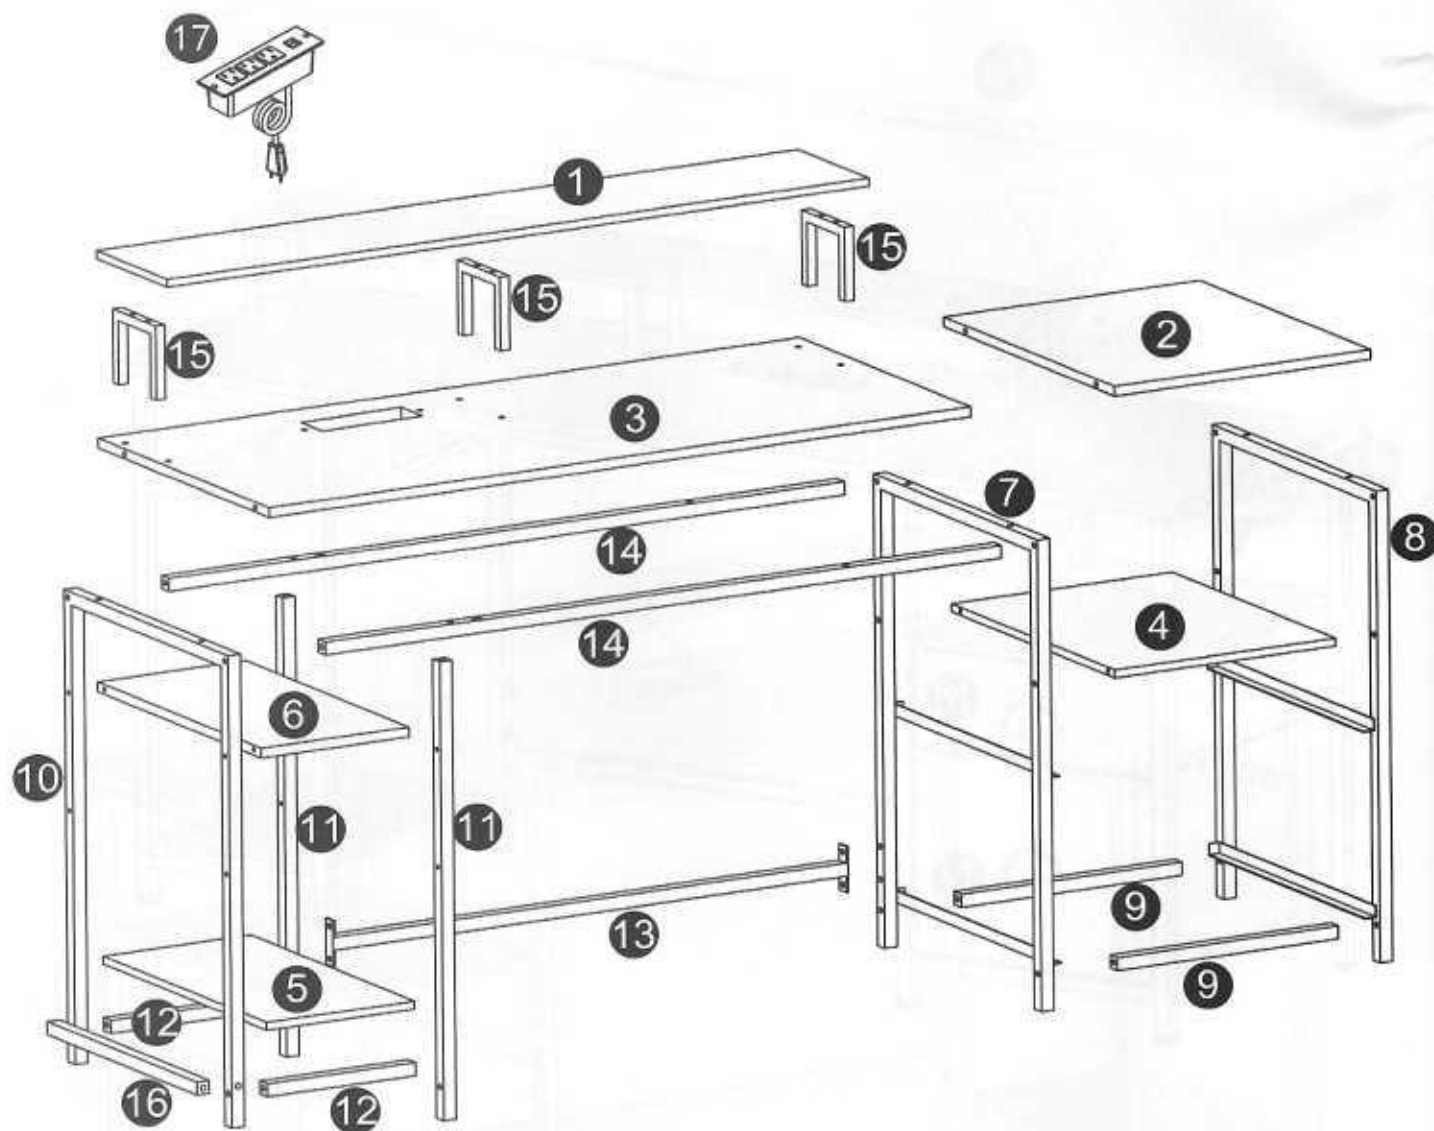


Before assembly, please read the USER MANUAL thoroughly for quick assembly, check accessories and confirm they are complete.

If you have any concerns or questions during assembly or about product itself, please feel free to contact us via Amazon Orders or Customer Support Email:





[Furologeeservice@sincerehl.com](mailto:Furologeeservice@sincerehl.com)


## Step1 Screw the adjustable feet of the file cabinet

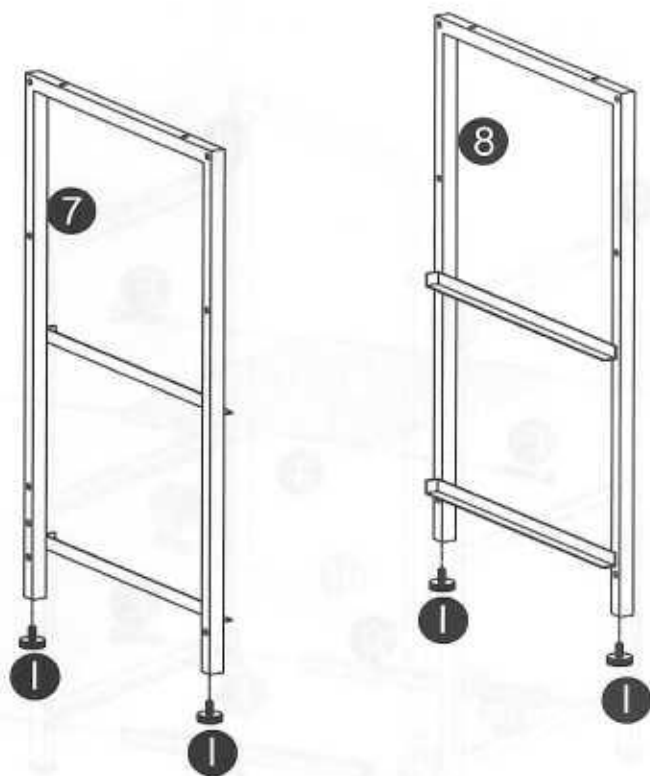 




## Step2 Assemble the the file cabinet

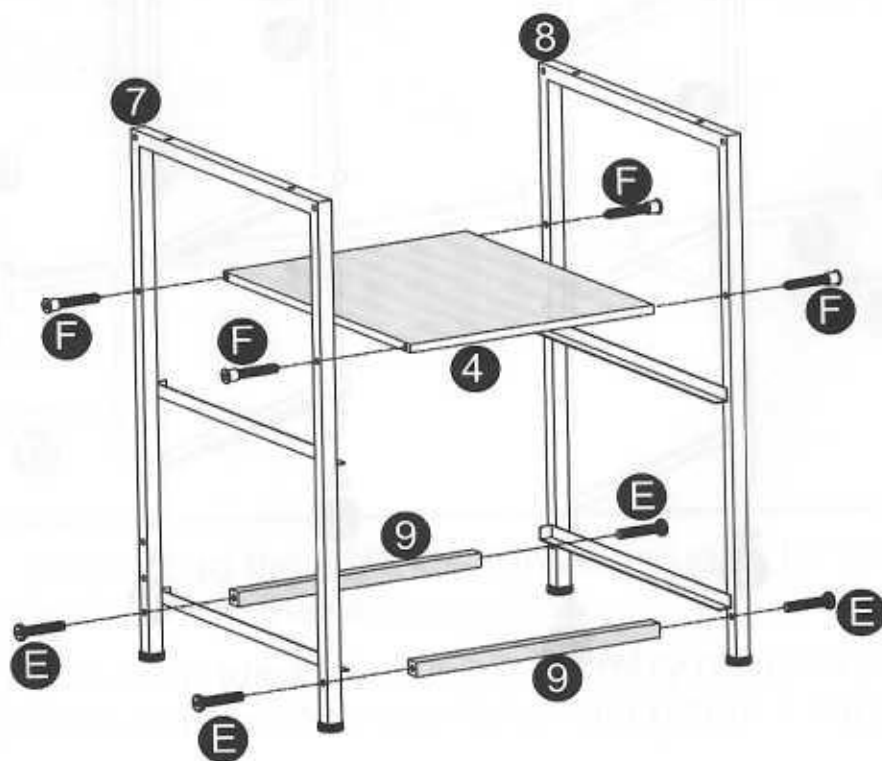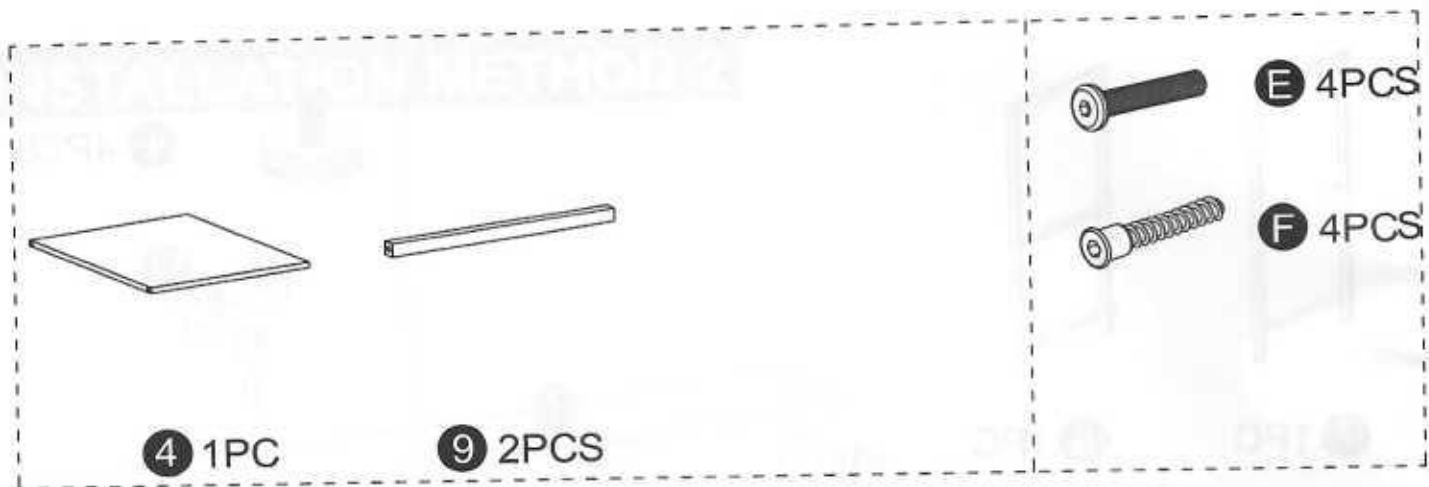  

### Step3 Assemble the frame of side shelf and screw the adjustable feet


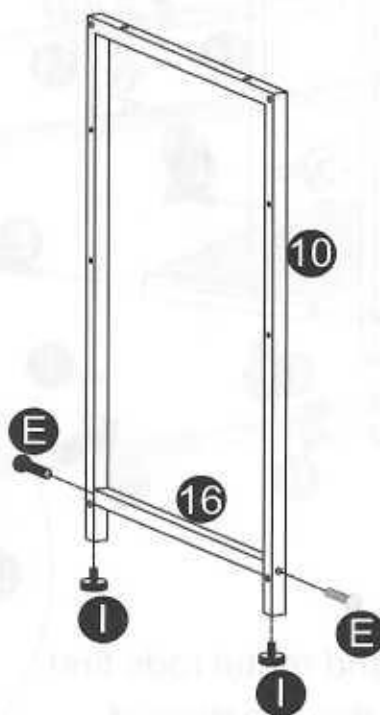 


## Step4 Assemble the side shelf

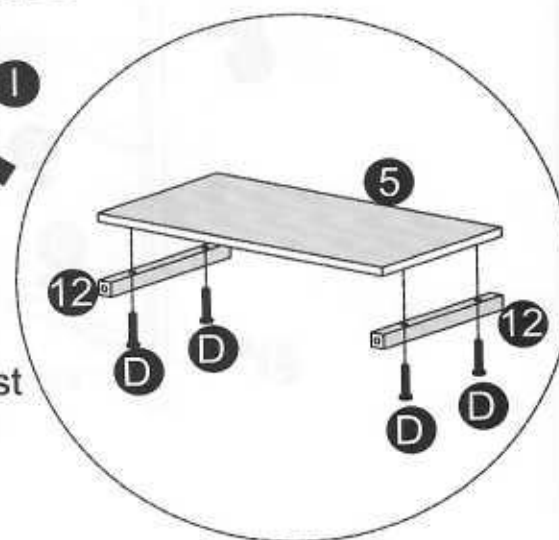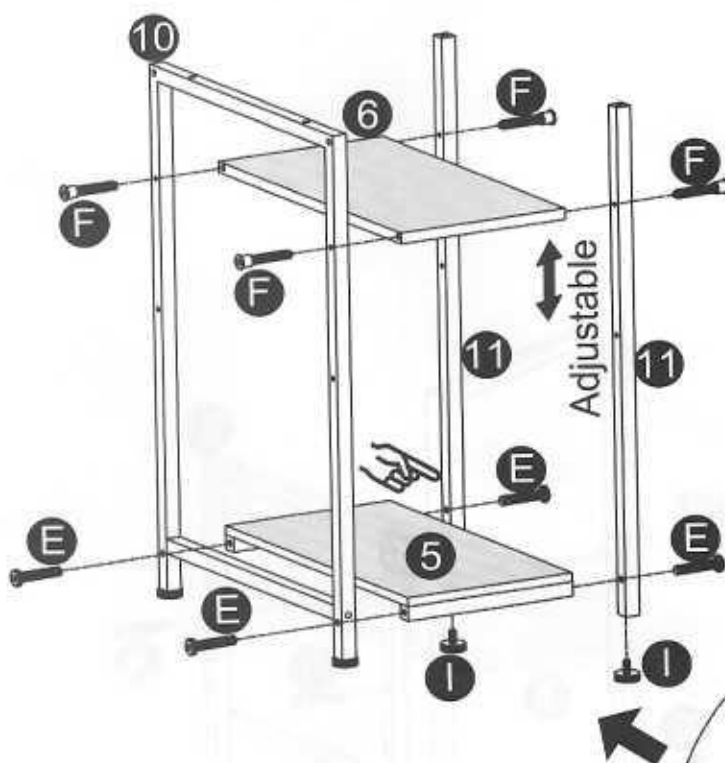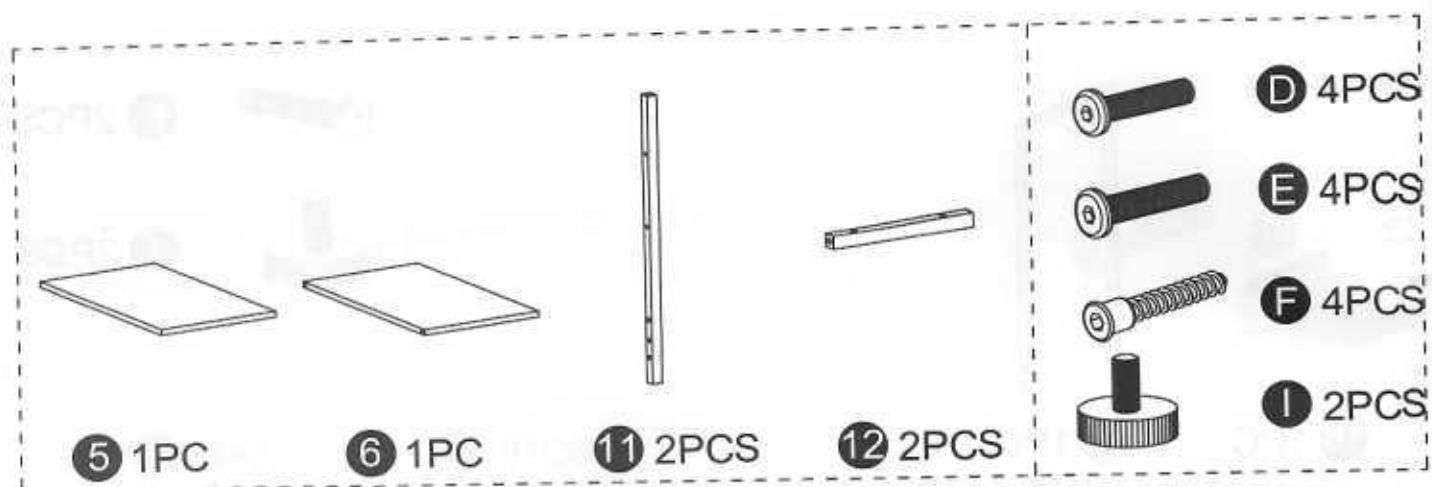   



- Note: 1. Assemble the board ⑤ and metal rods first  
 2. Please pay attention to the direction of the hole on metal rod ⑪  
 3. Shelf ⑥ can be assembled at the top or in the middle

## Step5 Assemble metal tubes under the top board and the bottom tube

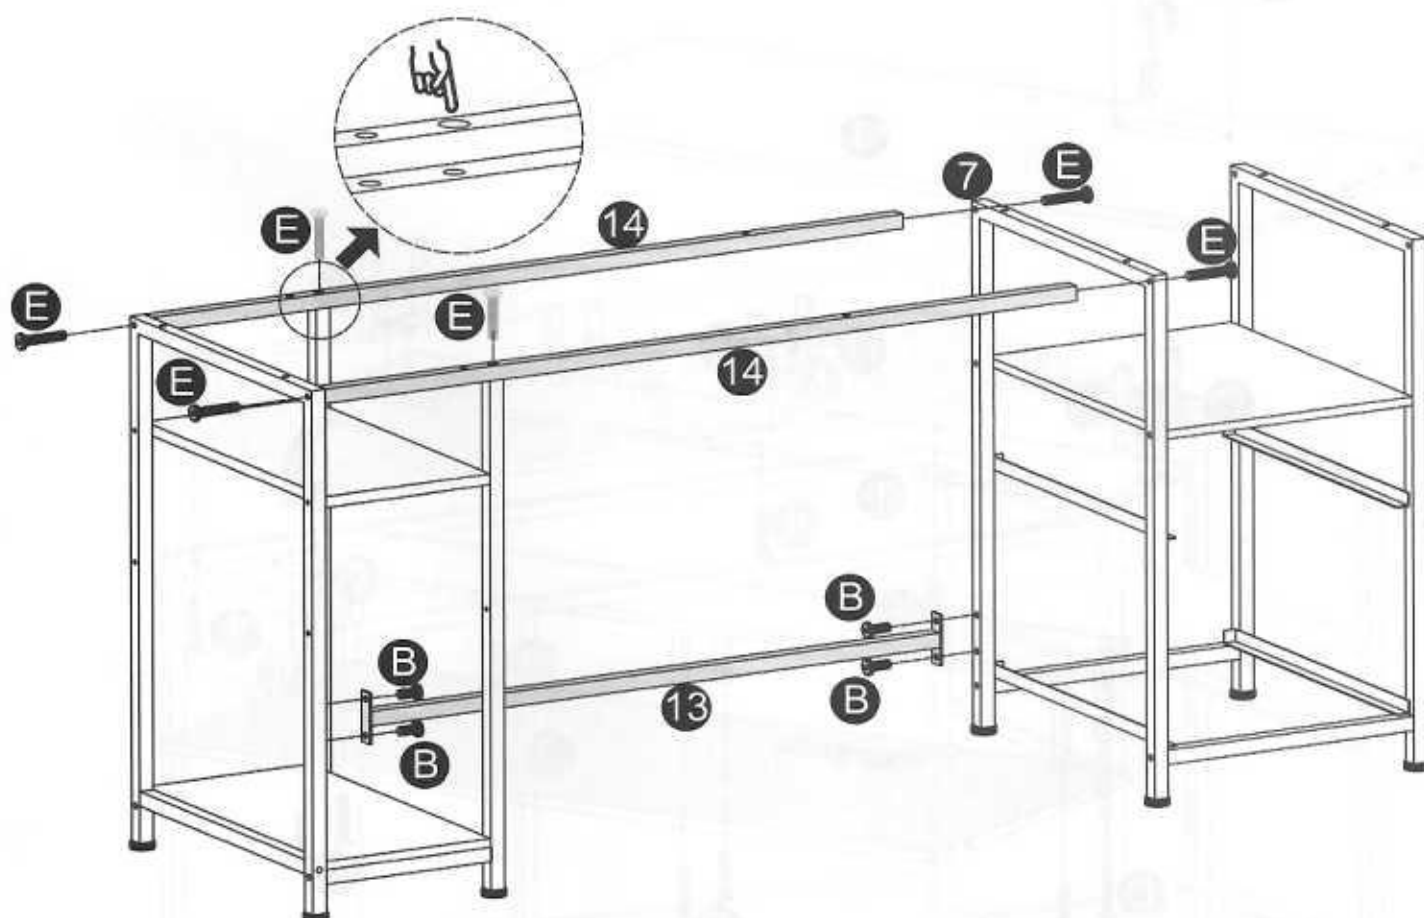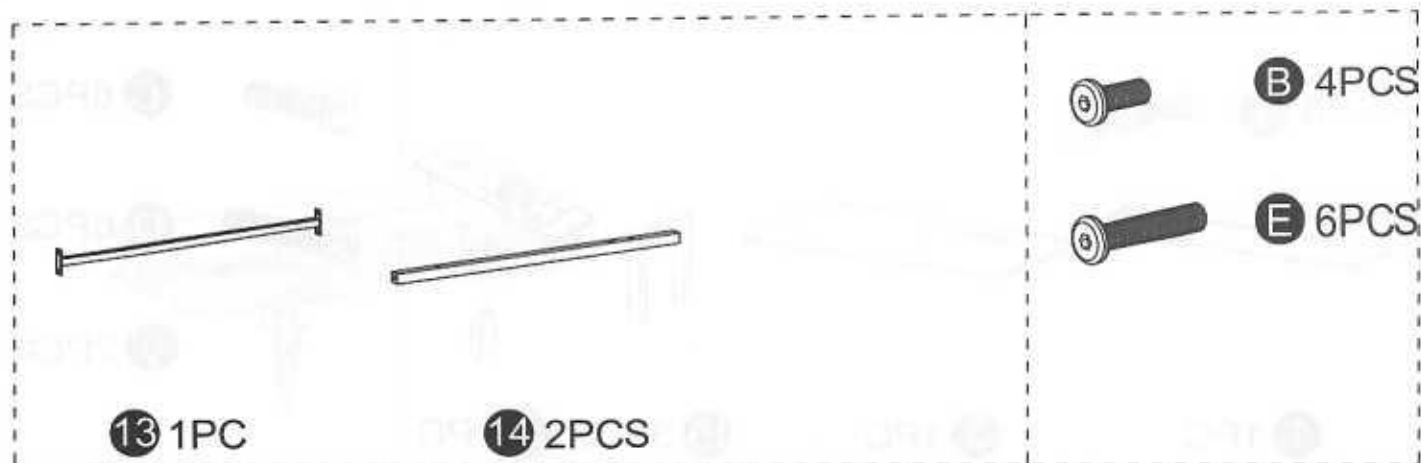  

Note: The large hole must face up so that screw ⑤ can be screwed into tube



## Step6 Assemble the monitor stand and outlet, then fix it to the top board

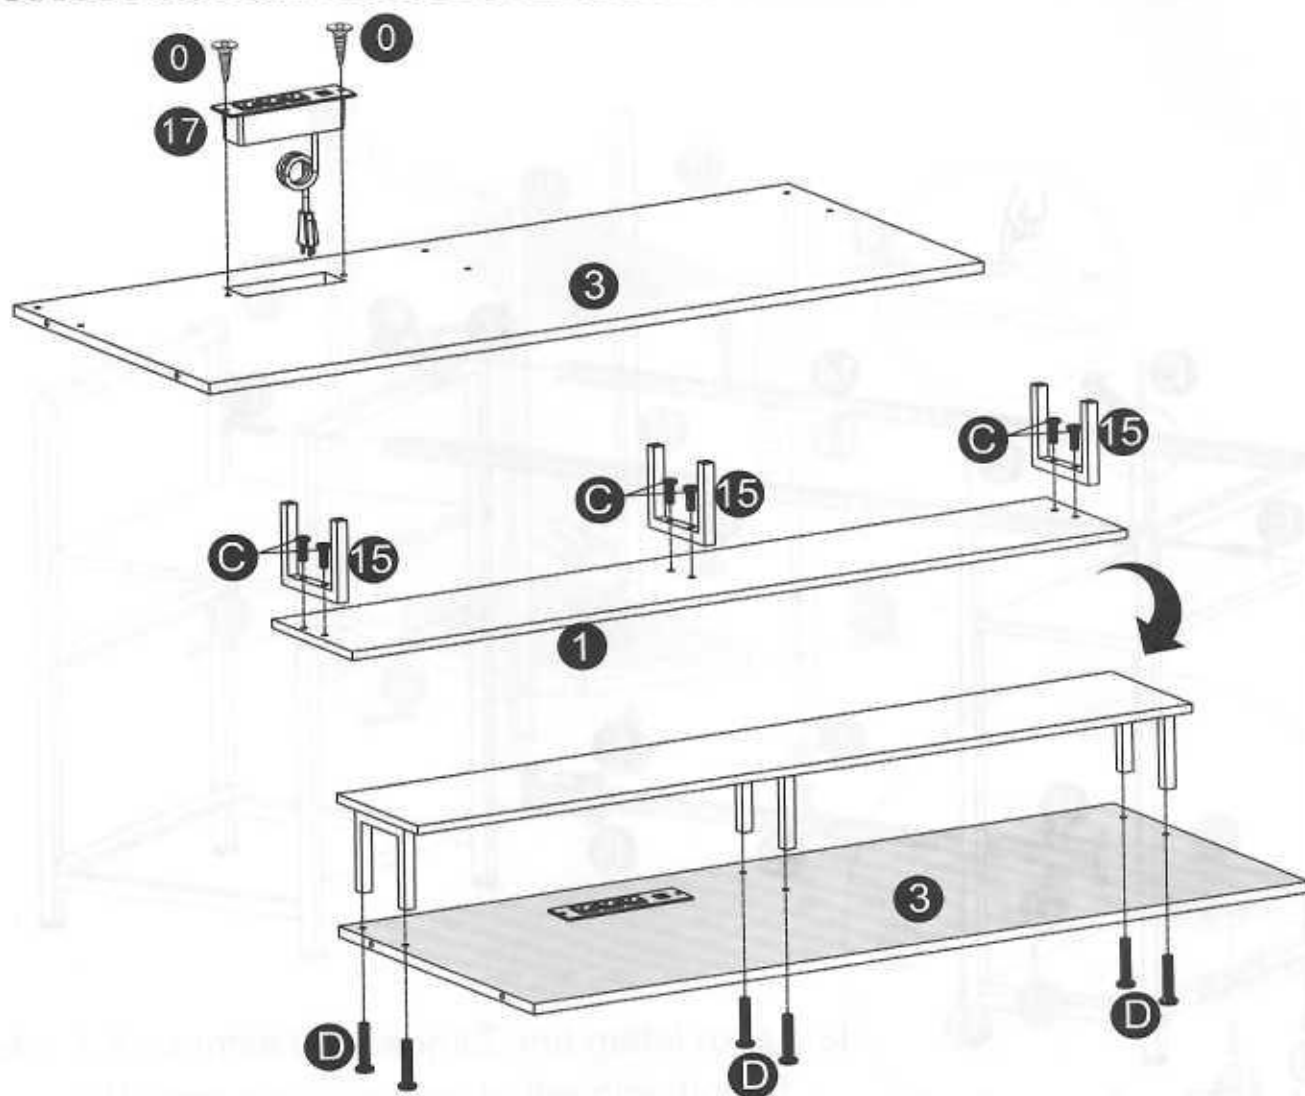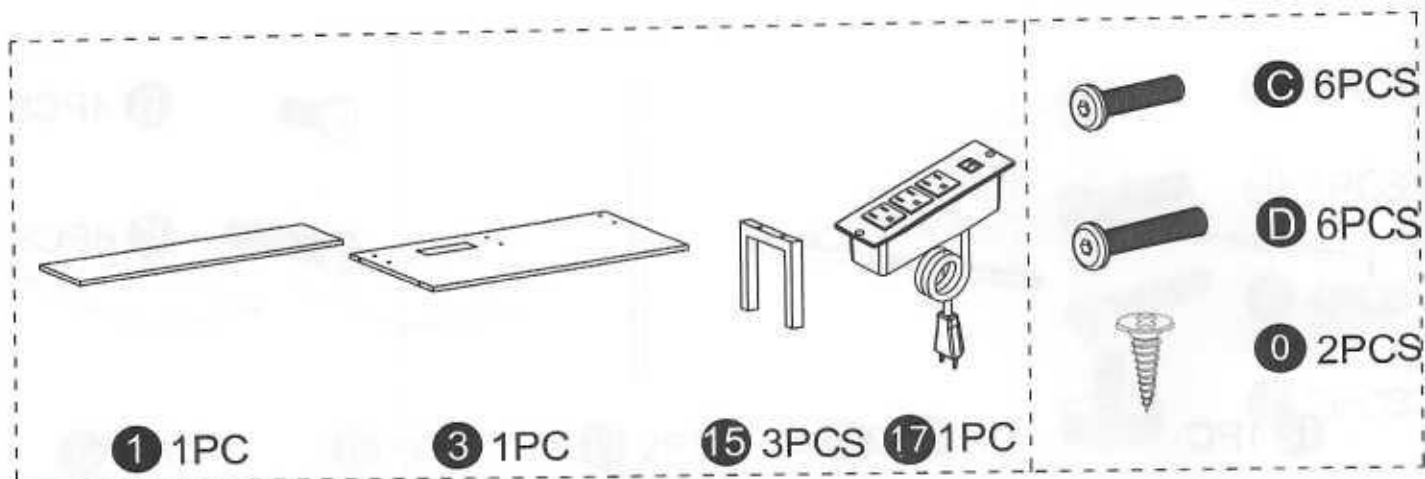  


Note: Screw Ⓒ is used to fix ① and ⑮; Screw Ⓓ is used to fix ③ and ⑮




## Step7 Assemble the top board

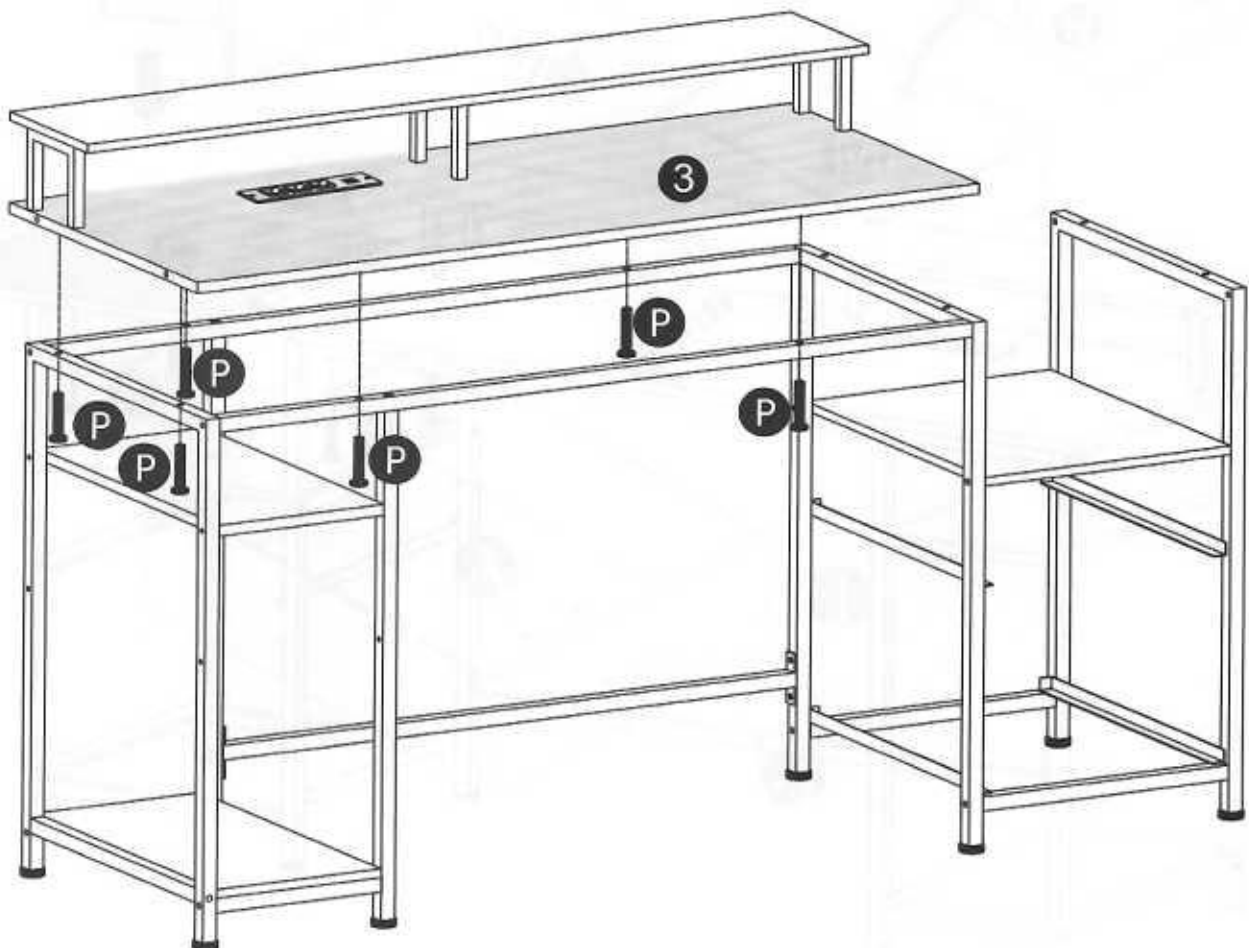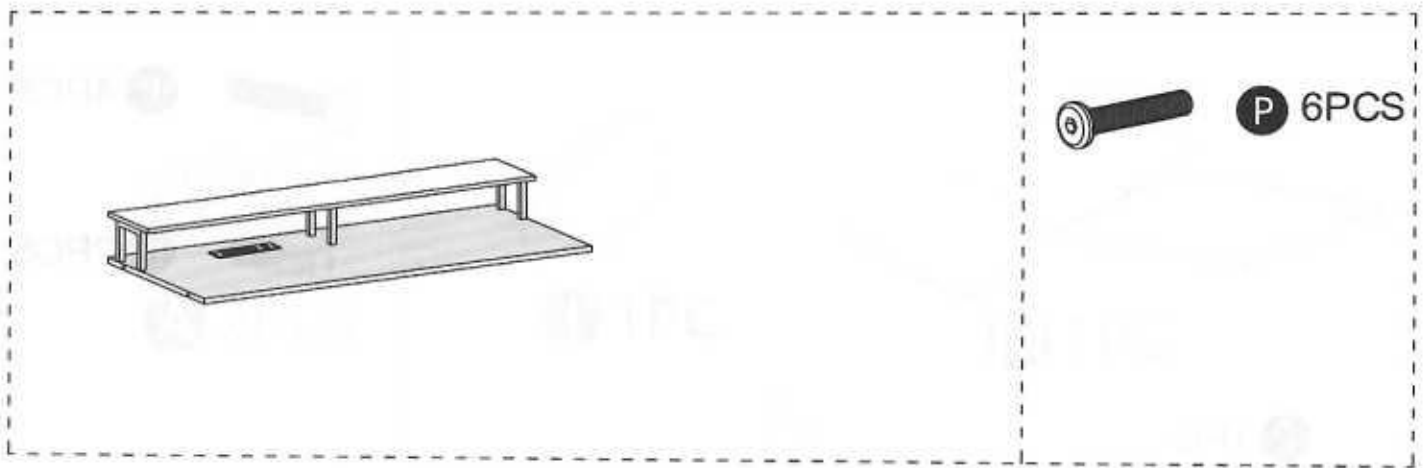  

## Step8 Snap into the wooden pin,then fix the small top board on the desk

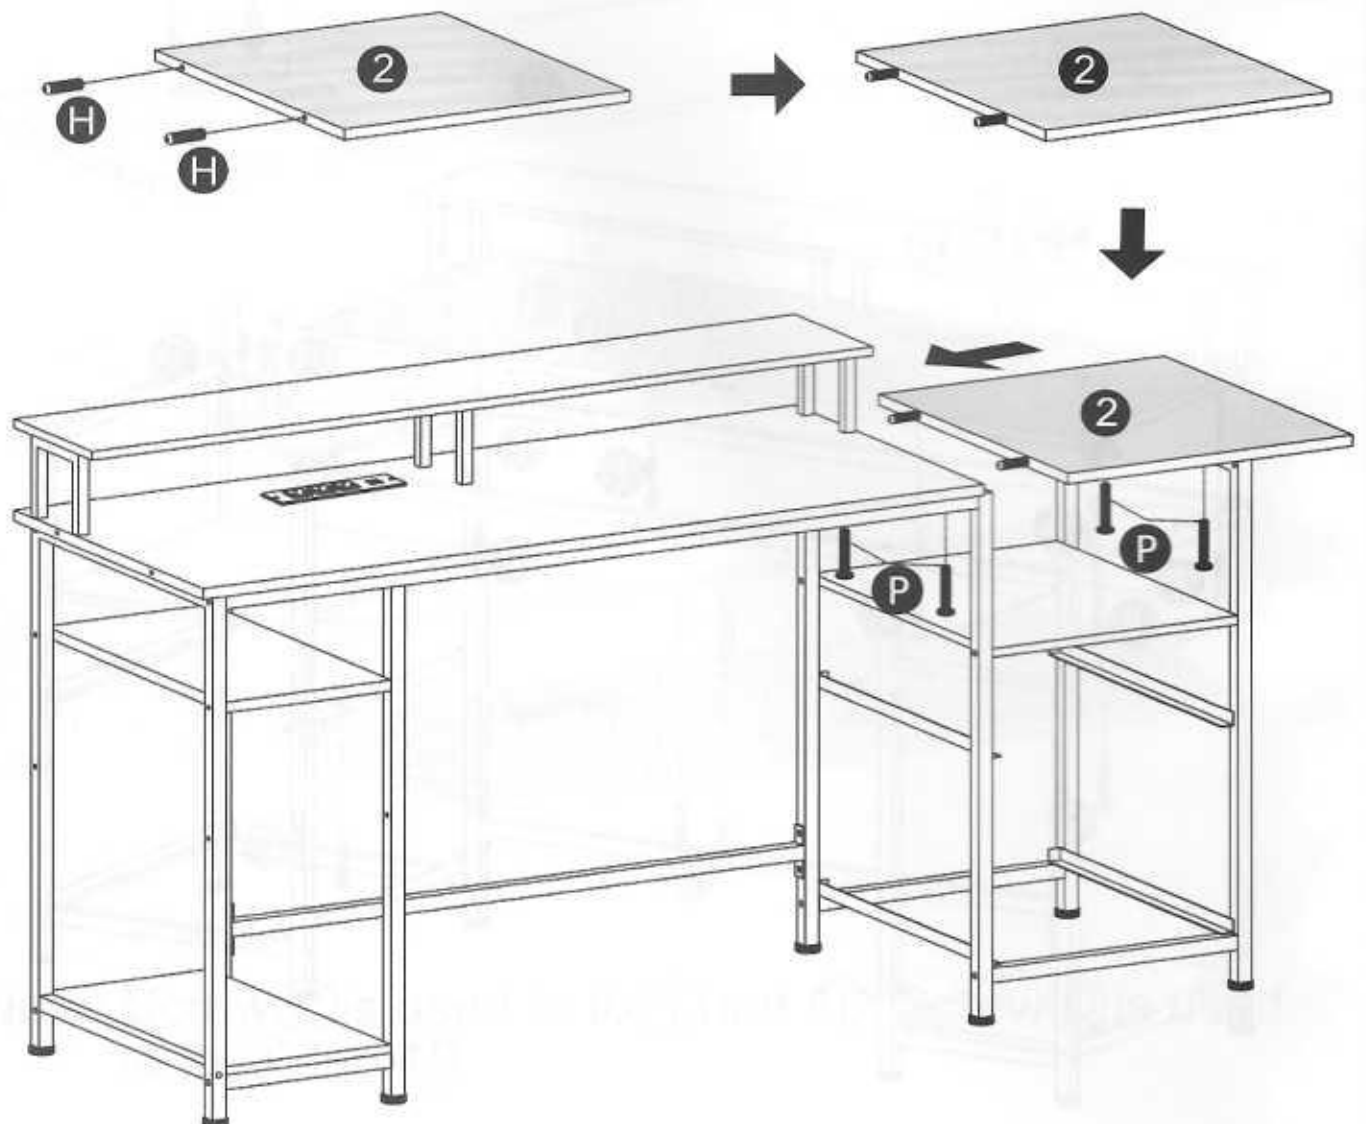 


## Step9 Assemble the drawer

 




**A** 2PCS



 
**J** 1PC

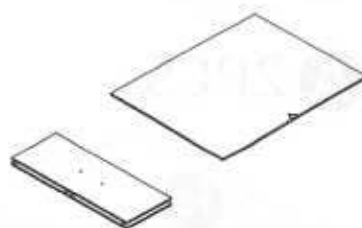

**M** 1PC

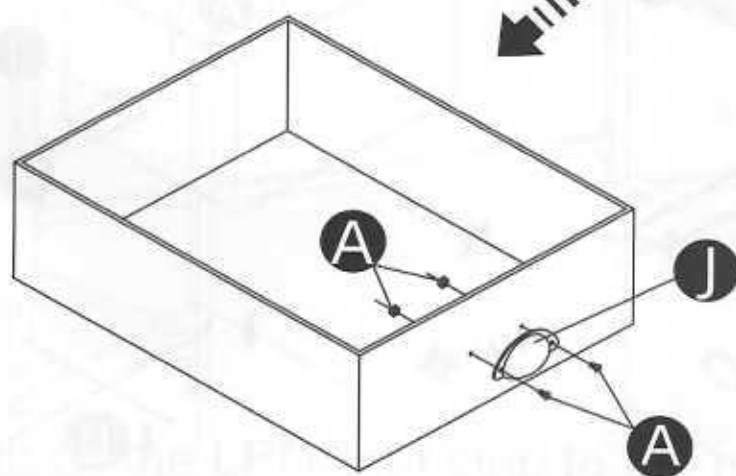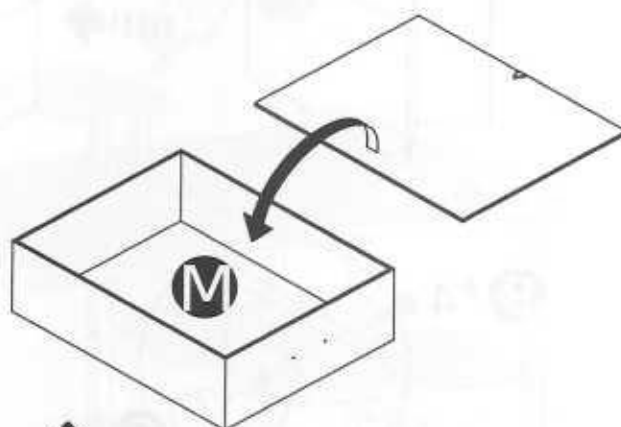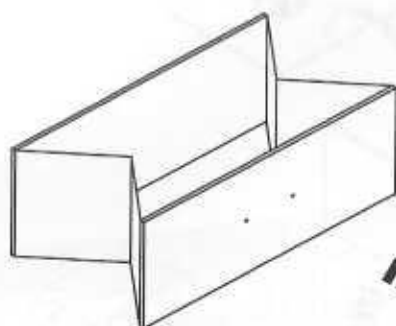   

## Step10 Assemble the file cabinet

 


**A** 2PCS



**G** 4PCS



 **B** 4PCS

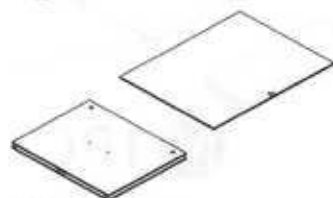


**N** 1PC




**L** 1PC



 **J** 1PC

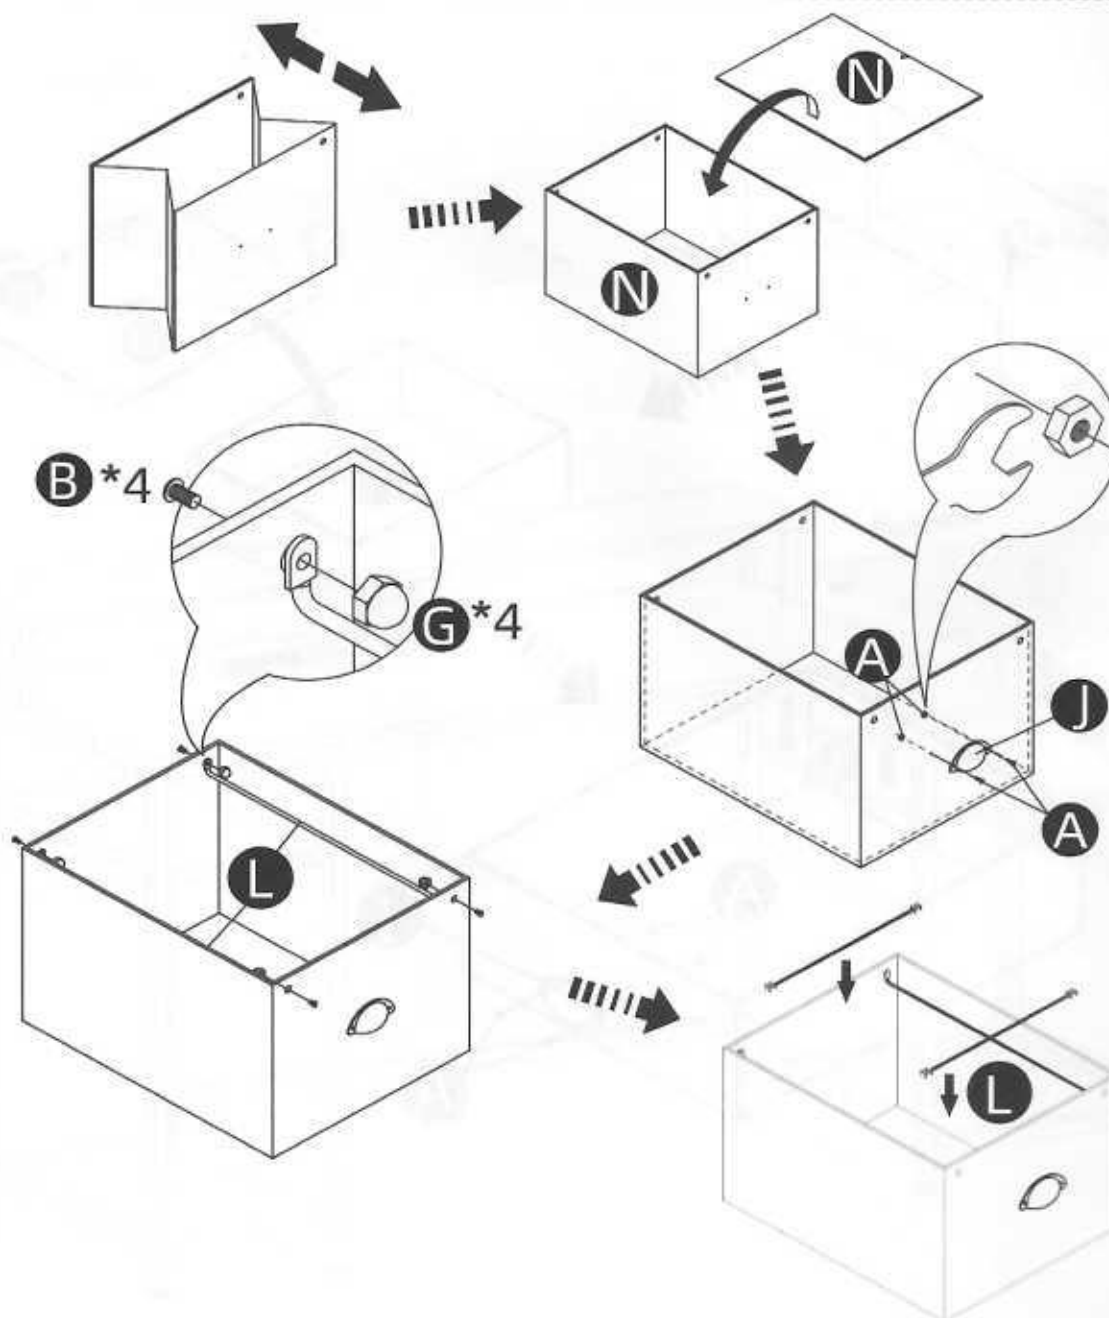


## Step11 Assemble the LED light strip

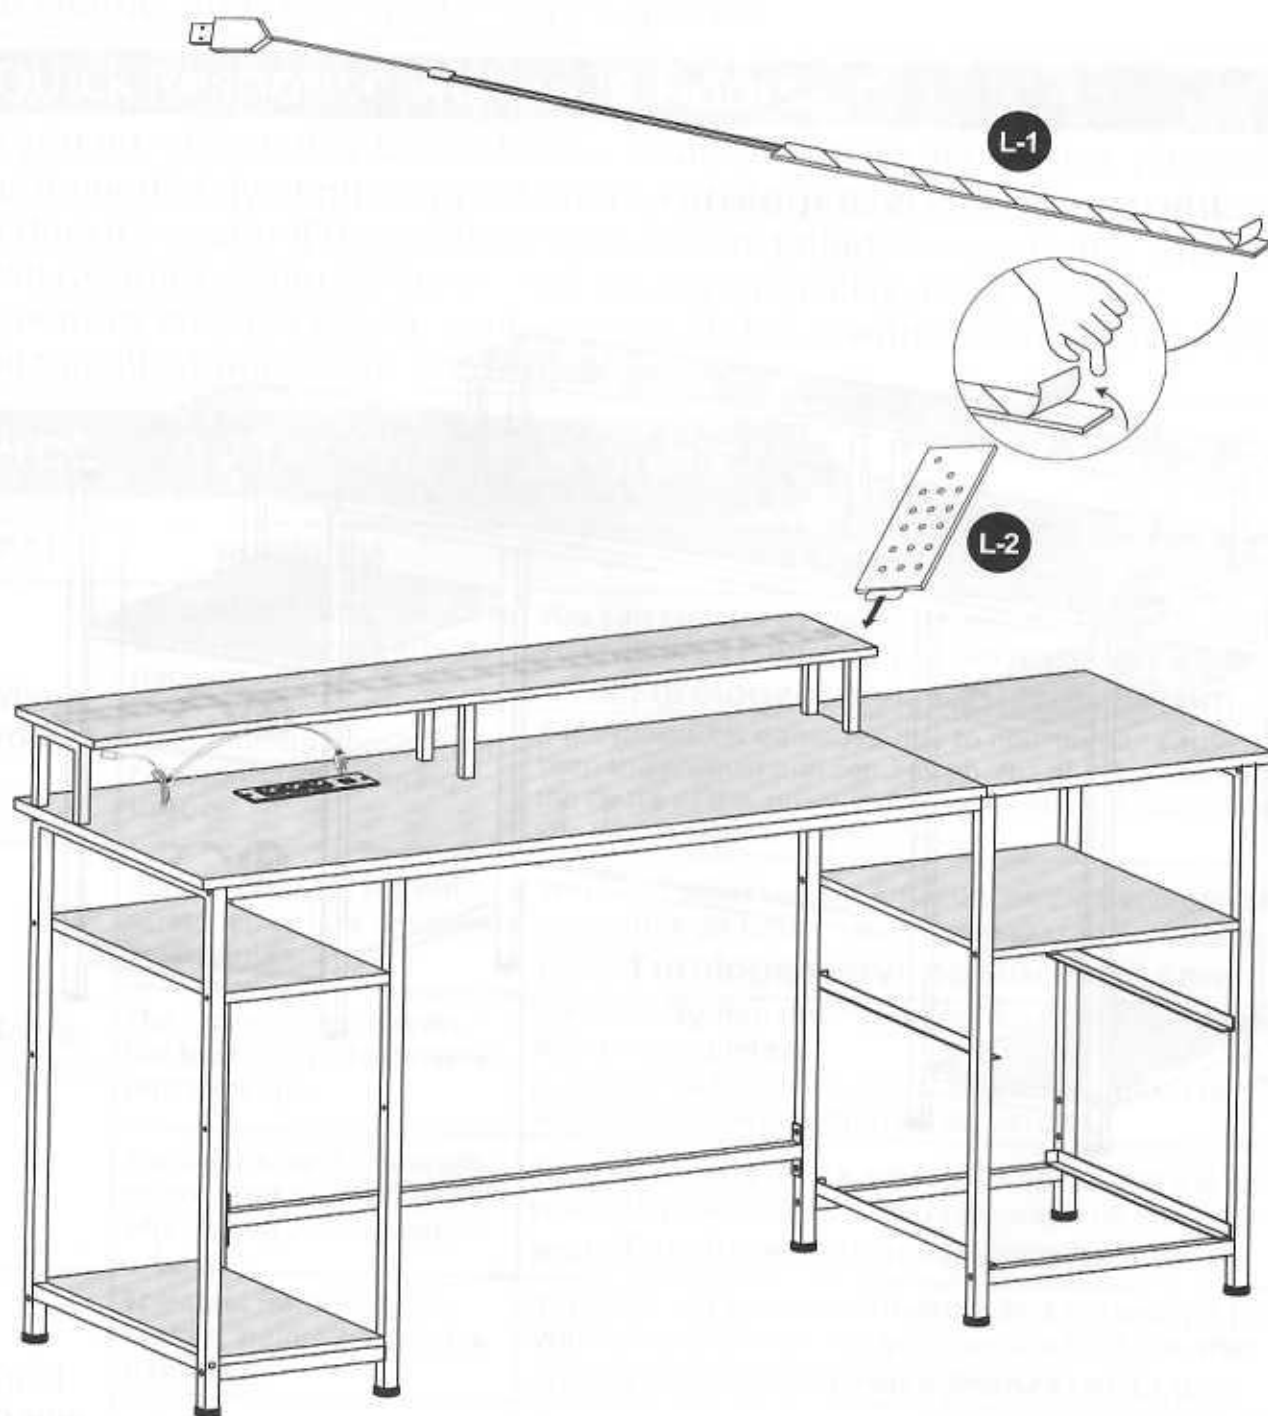 

Note: Attach the LED light strip to the monitor stand board, then connection socket, (L-2) control the LED light strip

## Step12 Put in the drawer and the file cabinet

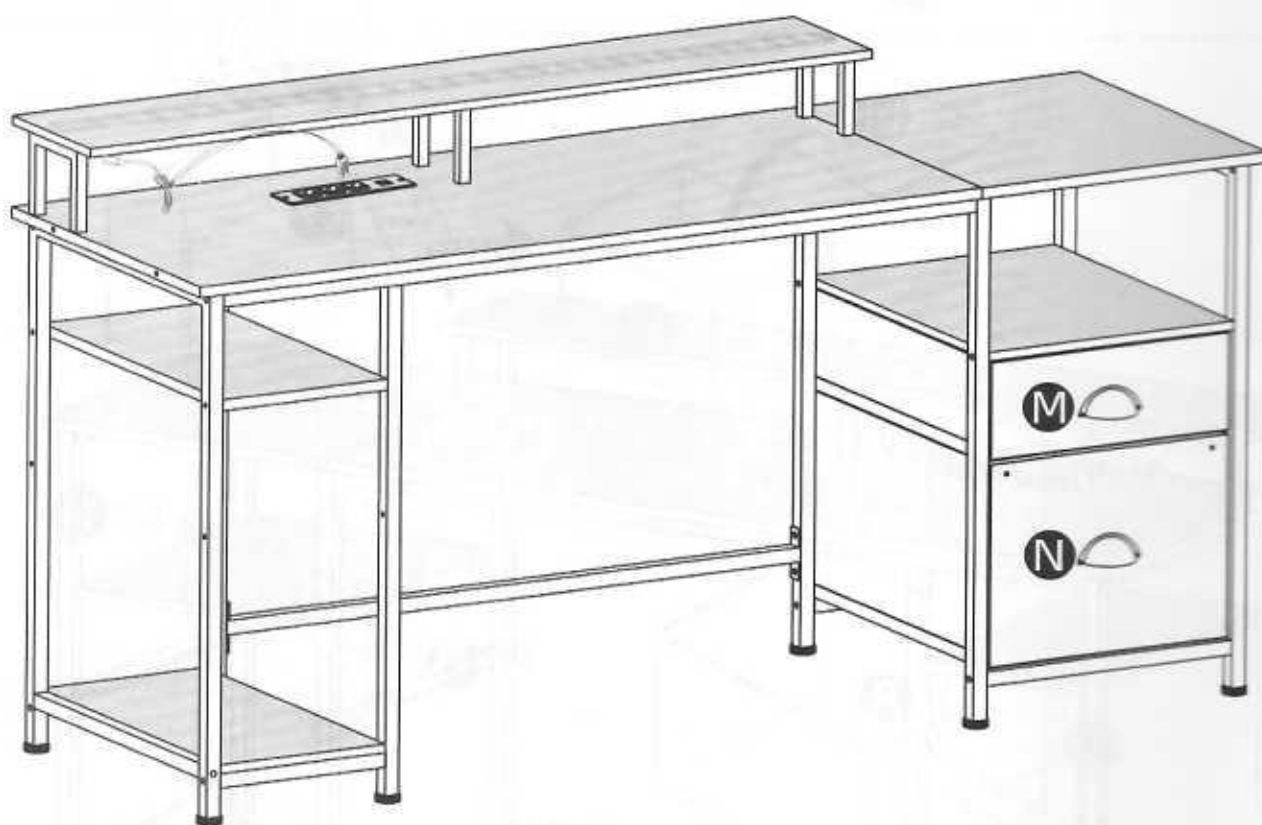 

# Customer Service

## 1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one(1)year starting from the date of purchase during normal use of household conditions. If your appliance fails within the limited warranty period, we will arrange a new replacement free of charge, and cover all the shipping costs.

## Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately at our support email:**Furologeeservice@sincerehl.com**. It doesn't matter if the product has been installed, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem with us is to attach a video or picture illustrating your product issue.

## Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after-sales email: <b>Furologeeservice@sincerehl.com</b> .
	Encountering non-human caused damage during usage.	If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Table Surface	Board Surface is broken, scratched or lack of some screw holes.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after-sales email: <b>Furologeeservice@sincerehl.com</b> .
	The screw holes that on the board and steel frame don't line up.	1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjusting board and steel frame until the screw holes are lined up, then tighten all the screws.
	The desk board is uneven or not tight that has gaps after being assembled.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after-sales email: <b>Furologeeservice@sincerehl.com</b> .
Steel Frame	The steel frame is bent, broken, painted, rusted or damaged.	You can contact us via Amazon, and we will get back to you within 24 hours. Or, you can reach US via after-sales email: <b>Furologeeservice@sincerehl.com</b> .
	The table is unstable after being assembled.	1. Check if the screws are tightened. 2. Read through out the manual, check are there any parts installed incorrectly or missing assembled. 3. If your problem still can't be solved, please feel free to contact us.

If you can't finish the assembly, please feel free to contact us via Amazon or Email: **Furologeeservice@sincerehl.com**